

# Lanner

## Network Appliance Platform

Hardware Platforms for Network Computing

# NCA-5230 User Manual

Version: 1.5

Date of Release:2024-03-21

## About this Document

This manual describes the overview of the various functionalities of this product and the information you need to get it ready for operation. It is intended for those who are:

- responsible for installing, administering, and troubleshooting this system or Information Technology professionals.
- assumed to be qualified in the servicing of computer equipment, such as professional system integrators or service personnel and technicians.

The latest version of this document can be found on Lanner’s official website, available either through the product page or through the [Lanner Download Center](#) page with a login account and password.

## Icons Descriptions

This document utilizes different icons in order to make the selected text more transparent and explicable to users. Please note that this document contains the following icons:

Icon	Usage
 <b>Note or Information</b>	This mark indicates that there is something you should pay special attention to while using the product.
 <b>Warning or Important</b>	This mark indicates that there is a caution or warning, and it is something that could damage your property or product.

## Online Resources

To obtain additional documentation resources and software updates for your system, please visit the [Lanner Download Center](#). As certain categories of documents are only available to users who are logged in, please be registered for a Lanner Account at <http://www.lannerinc.com/> to access published documents and downloadable resources.

For troubleshooting the issues with your system, please check the [Lanner Q&A](#) page for a diagnostic procedure and troubleshooting steps.

## Technical Support

In addition to contacting your distributor or sales representative, you could submit a request to our [Lanner Technical Support](#) page to fill in a support ticket to our technical support department.

## Documentation Feedback

Your feedback is valuable to us, as it will help us continue to provide you with more accurate and relevant documentation. To provide any feedback, comments, or to report an error, please email [contact@lannerinc.com](mailto:contact@lannerinc.com). Thank you for your time.

## Contacts

### Taiwan Corporate Headquarters

**Lanner Electronics Inc.**

7F, No.173, Sec.2, Datong Rd.  
Xizhi District, New Taipei City 22184,  
Taiwan

**立端科技股份有限公司**

221 新北市汐止區  
大同路二段 173 號 7 樓

T: +886-2-8692-6060

F: +886-2-8692-6101

E: [contact@lannerinc.com](mailto:contact@lannerinc.com)

### USA

**Lanner Electronics Inc.**

47790 Westinghouse Drive  
Fremont, CA 94539

T: +1-855-852-6637

F: +1-510-979-0689

E: [sales\\_us@lannerinc.com](mailto:sales_us@lannerinc.com)

### Europe

**Lanner Europe B.V.**

Wilhelmina van Pruisenweg 104  
2595 AN The Hague  
The Netherlands

T: +31 70 701 3256

E: [sales\\_eu@lannerinc.com](mailto:sales_eu@lannerinc.com)

### China

**Beijing L&S Lancom Platform Tech. Co., Ltd.**

Guodong LOFT 9 Layer No. 9 Huinan Road,  
Huilongguan Town, Changping District, Beijing  
102208 China

T: +86 010-82795600

F: +86 010-62963250

E: [service@ls-china.com.cn](mailto:service@ls-china.com.cn)

### Canada

**Lanner Electronics Canada Ltd**

3160A Orlando Drive  
Mississauga, ON  
L4V 1R5 Canada

T: +1 877-813-2132

F: +1 905-362-2369

E: [sales\\_ca@lannerinc.com](mailto:sales_ca@lannerinc.com)

## Copyright and Trademarks

This document is copyrighted © 2024 by Lanner Electronics Inc. All rights are reserved. The original manufacturer reserves the right to make improvements to the products described in this manual at any time without notice.

No part of this manual may be reproduced, copied, translated, or transmitted in any form or by any means without the prior written permission of the original manufacturer.

Information provided in this manual is intended to be accurate and reliable. However, the original manufacturer assumes no responsibility for its use, nor for any infringements upon the rights of third parties that may result from such use.

## Acknowledgment

Intel® Core™ and Intel® Xeon® are trademarks of Intel Corporation or its subsidiaries in the U.S. and/or other countries.

Microsoft Windows and MS-DOS are registered trademarks of Microsoft Corp.

All other product names or trademarks are properties of their respective owners.

## Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ▶ Reorient or relocate the receiving antenna.
- ▶ Increase the separation between the equipment and receiver.
- ▶ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ▶ Consult the dealer or an experienced radio/TV technician for help.

### FCC Caution

- ▶ Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.
- ▶ This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.



#### Note

1. An unshielded-type power cord is required in order to meet FCC emission limits and also to prevent interference to the nearby radio and television reception. It is essential that only the supplied power cord be used.
2. Use only shielded cables to connect I/O devices to this equipment.
3. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



#### Important

1. Operations in the 5.15-5.25GHz band are restricted to indoor usage only.
2. This device meets all the other requirements specified in Part 15E, Section 15.407 of the FCC Rules.

## Safety Guidelines

Follow these guidelines to ensure general safety:

- ▶ Keep the chassis area clear and dust-free during and after installation.
- ▶ Do not wear loose clothing or jewelry that could get caught in the chassis. Fasten your tie or scarf and roll up your sleeves.
- ▶ Wear safety glasses if you are working under any conditions that might be hazardous to your eyes.
- ▶ Do not perform any action that creates a potential hazard to people or makes the equipment unsafe.
- ▶ Disconnect all power by turning off the power and unplugging the power cord before installing or removing a chassis or working near power supplies
- ▶ Do not work alone if potentially hazardous conditions exist.
- ▶ Never assume that power is disconnected from a circuit; always check the circuit.

## Consignes de sécurité

Suivez ces consignes pour assurer la sécurité générale :

- ▶ Laissez la zone du châssis propre et sans poussière pendant et après l'installation.
- ▶ Ne portez pas de vêtements amples ou de bijoux qui pourraient être pris dans le châssis. Attachez votre cravate ou écharpe et remontez vos manches.
- ▶ Portez des lunettes de sécurité pour protéger vos yeux.
- ▶ N'effectuez aucune action qui pourrait créer un danger pour d'autres ou rendre l'équipement dangereux.
- ▶ Coupez complètement l'alimentation en éteignant l'alimentation et en débranchant le cordon d'alimentation avant d'installer ou de retirer un châssis ou de travailler à proximité de sources d'alimentation.
- ▶ Ne travaillez pas seul si des conditions dangereuses sont présentes.
- ▶ Ne considérez jamais que l'alimentation est coupée d'un circuit, vérifiez toujours le circuit. Cet appareil génère, utilise et émet une énergie radiofréquence et, s'il n'est pas installé et utilisé conformément aux instructions des fournisseurs de composants sans fil, il risque de provoquer des interférences dans les communications radio.

## Lithium Battery Caution

- ▶ There is risk of explosion if the battery is replaced by an incorrect type.
- ▶ Dispose of used batteries according to the instructions.
- ▶ Installation should be conducted only by a trained electrician or only by an electrically trained person who knows all installation procedures and device specifications which are to be applied.
- ▶ Do not carry the handle of power supplies when moving to another place.
- ▶ Please conform to your local laws and regulations regarding safe disposal of lithium batteries.
- ▶ Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery can result in an explosion.
- ▶ Leaving a battery in an extremely high temperature environment can result in an explosion or the leakage of flammable liquid or gas.
- ▶ A battery subjected to extremely low air pressure may result in an explosion or the leakage of flammable liquid or gas.

## Avertissement concernant la pile au lithium

- ▶ Risque d'explosion si la pile est remplacée par une autre d'un mauvais type.
- ▶ Jetez les piles usagées conformément aux instructions.
- ▶ L'installation doit être effectuée par un électricien formé ou une personne formée à l'électricité connaissant toutes les spécifications d'installation et d'appareil du produit.
- ▶ Ne transportez pas l'unité en la tenant par le câble d'alimentation lorsque vous déplacez l'appareil.

## Operating Safety

- ▶ Electrical equipment generates heat. Ambient air temperature may not be adequate to cool equipment to acceptable operating temperatures without adequate circulation. Be sure that the room in which you choose to operate your system has adequate air circulation.
- ▶ Ensure that the chassis cover is secure. The chassis design allows cooling air to circulate effectively. An open chassis permits air leaks, which may interrupt and redirect the flow of cooling air from internal components.
- ▶ Electrostatic discharge (ESD) can damage equipment and impair electrical circuitry. ESD damage occurs when electronic components are improperly handled and can result in complete or intermittent failures. Be sure to follow ESD-prevention procedures when removing and replacing components to avoid these problems.

- ▶ Wear an ESD-preventive wrist strap, ensuring that it makes good skin contact. If no wrist strap is available, ground yourself by touching the metal part of the chassis.
- ▶ Periodically check the resistance value of the antistatic strap, which should be between 1 and 10 megohms (Mohms).

## Sécurité de fonctionnement

- ▶ L'équipement électrique génère de la chaleur. La température ambiante peut ne pas être adéquate pour refroidir l'équipement à une température de fonctionnement acceptable sans circulation adaptée. Vérifiez que votre site propose une circulation d'air adéquate.
- ▶ Vérifiez que le couvercle du châssis est bien fixé. La conception du châssis permet à l'air de refroidissement de bien circuler. Un châssis ouvert laisse l'air s'échapper, ce qui peut interrompre et rediriger le flux d'air frais destiné aux composants internes.
- ▶ Les décharges électrostatiques (ESD) peuvent endommager l'équipement et gêner les circuits électriques. Des dégâts d'ESD surviennent lorsque des composants électroniques sont mal manipulés et peuvent causer des pannes totales ou intermittentes. Suivez les procédures de prévention d'ESD lors du retrait et du remplacement de composants.
- ▶ Portez un bracelet anti-ESD et veillez à ce qu'il soit bien au contact de la peau. Si aucun bracelet n'est disponible, reliez votre corps à la terre en touchant la partie métallique du châssis.
- ▶ Vérifiez régulièrement la valeur de résistance du bracelet antistatique, qui doit être comprise entre 1 et 10 mégohms (Mohms).

## Mounting Installation Precautions

The following should be put into consideration for rack-mount or similar mounting installations:

- ▶ Do not install and/or operate this unit in any place that flammable objects are stored or used in.
- ▶ The installation of this product must be performed by trained specialists; otherwise, a non-specialist might create the risk of the system's falling to the ground or other damages.
- ▶ Lanner Electronics Inc. shall not be held liable for any losses resulting from insufficient strength for supporting the system or use of inappropriate installation components.
- ▶ Elevated Operating Ambient - If installed in a closed or multi-unit rack assembly, the operating ambient temperature of the rack environment may be greater than room ambient. Therefore, consideration should be given to installing the equipment in an environment compatible with the maximum ambient temperature (T<sub>ma</sub>) specified by the manufacturer.
- ▶ Reduced Air Flow - Installation of the equipment in a rack should be such that the amount of airflow required for safe operation of the equipment is not compromised.
- ▶ Mechanical Loading - Mounting of the equipment in the rack should be such that a hazardous condition is not achieved due to uneven mechanical loading.
- ▶ Circuit Overloading - Consideration should be given to the connection of the equipment to the supply circuit and the effect that overloading of the circuits might have on overcurrent protection and supply wiring. Appropriate consideration of equipment nameplate ratings should be used when addressing this concern.
- ▶ Reliable Grounding - Reliable grounding of rack-mounted equipment should be maintained. Particular attention should be given to supply connections other than direct connections to the branch circuit (e.g., use of power strips).

## Installation & Operation

- ▶ This equipment must be grounded. The power cord for product should be connected to a socket-outlet with earthing connection.  
Cet équipement doit être mis à la terre. La fiche d'alimentation doit être connectée à une prise de terre correctement câblée
- ▶ Suitable for installation in Information Technology Rooms in accordance with Article 645 of the National Electrical Code and NFPA 75.  
Peut être installé dans des salles de matériel de traitement de l'information conformément à l'article 645 du National Electrical Code et à la NFPA 75.
- ▶ The machine can only be used in a restricted access location and must be installed by a skilled person.  
Les matériels sont destinés à être installés dans des EMPLACEMENTS À ACCÈS RESTREINT.

## Safety Warning

- ▶ Class I Equipment. This equipment must be earthed. The power plug must be connected to a properly wired earth ground socket outlet. An improperly wired socket outlet could place hazardous voltages on accessible metal parts.
- ▶ "Product shall be used with Class 1 laser device modules."

### Avertissement

- ▶ Équipement de classe I. Ce matériel doit être relié à la terre. La fiche d'alimentation doit être raccordée à une prise de terre correctement câblée. Une prise de courant mal câblée pourrait induire des tensions dangereuses sur des parties métalliques accessibles.
- ▶ "Le produit doit être utilisé avec des modules de dispositifs laser de classe 1."



**CAUTION:** TO DISCONNECT POWER, REMOVE ALL POWER CORDS FROM UNIT.  
 注意：要断开电源，请将所有电源线从本机上拔下。

**WARNUNG:** Wenn Sie das Gerät zwecks Wartungsarbeiten vom Netz trennen müssen, müssen Sie beide Netzteile abnehmen.

**ATTENTION:** DÉBRANCHER LES TOUT CORDONS D'ALIMENTATION POUR DÉCONNECTER L'UNITÉ DU SECTEUR.

## Electrical Safety Instructions


Before turning on the device, ground the grounding cable of the equipment. Proper grounding (grounding) is very important to protect the equipment against the harmful effects of external noise and to reduce the risk of electrocution in the event of a lightning strike. To uninstall the equipment, disconnect the ground wire after turning off the power. A ground wire is required and the part connecting the conductor must be greater than 4 mm<sup>2</sup> or 10 AWG.

### Consignes de sécurité électrique

- ▶ Avant d'allumer l'appareil, reliez le câble de mise à la terre de l'équipement à la terre.
- ▶ Une bonne mise à la terre (connexion à la terre) est très importante pour protéger l'équipement contre les effets néfastes du bruit externe et réduire les risques d'électrocution en cas de foudre.
- ▶ Pour désinstaller l'équipement, débranchez le câble de mise à la terre après avoir éteint l'appareil.
- ▶ Un câble de mise à la terre est requis et la zone reliant les sections du conducteur doit faire plus de 4 mm<sup>2</sup> ou 10 AWG.


### Grounding Procedure for DC Power Source

- ▶ Loosen the screw of the earthing point.
- ▶ Connect the grounding cable to the ground.
- ▶ The protection device for the DC power source must provide 30 A current.
- ▶ This protection device must be connected to the power source before DC power.

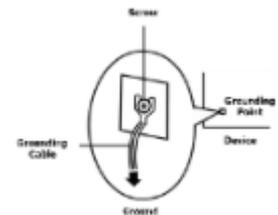

### Procédure de mise à la terre pour source d'alimentation CC

- ▶ Desserrez la vis du terminal de mise à la terre.
- ▶ Branchez le câble de mise à la terre à la terre.
- ▶ L'appareil de protection pour la source d'alimentation CC doit fournir 30 A de courant.
- ▶ Cet appareil de protection doit être branché à la source d'alimentation avant l'alimentation CC.

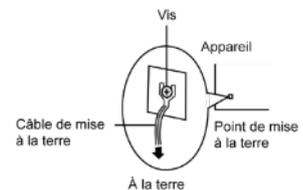

# Table of Contents

---

<b>Chapter 1: Product Overview.....</b>	<b>10</b>
Package Content.....	10
Optional Accessories Kits .....	10
Ordering Information .....	10
System Specifications.....	11
Front Panel .....	12
Rear Panel .....	13
Motherboard Information.....	14
<b>Chapter 2: Hardware Setup.....</b>	<b>20</b>
Opening the Chassis .....	20
Installing the CPU, Heatsink, and Fan Duct.....	21
Installing the System Memory .....	23
Installing the IPMI Card (Optional).....	25
Installing the TPM Module (Optional).....	26
Installing the M.2 Storage Card.....	27
Installing the Disk Drive(s) (Optional) .....	28
Installing the NIC Modules .....	30
Replacing the Power Supply.....	31
Mounting the System.....	32
<b>Chapter 3: Software Setup .....</b>	<b>37</b>
Main Page.....	38
Advanced Page .....	39
Chipset.....	66
Security.....	77

Boot Menu.....80

Save and Exit Menu .....81

Remote Server Management .....83

**Appendix A: LED Indicator Explanations .....87**

**Appendix B: Terms and Conditions .....88**

Warranty Policy .....88

# CHAPTER 1: PRODUCT OVERVIEW

Powered by Intel® Core™ i9/i7/i5/i3 & Intel® Xeon® W CPU (Codenamed Comet Lake S), NCA-5230 supports up to eight GbE RJ45 ports, eight SFP ports, with four bypass features. In addition to 2x NIC module slots for expansion, 2x 2.5" HDD/SDD bays for addition storage support and up to 128GB of DDR4 system memory. NCA-5230 is a high-performance, high-throughput network security platform designed to be optimized as the NGFW/UTM for deployment in SMB, branch office, enterprise and cloud data centers for advanced intrusion prevention, application/user visibility, SSL inspection and threat detection.

## Main Features

- ▶ Intel® Core™ i9/i7/i5/i3 CPU & Xeon® W CPU
- ▶ 8x GbE RJ45, 8x SFP, 4x Pairs of Bypass
- ▶ DDR4 2933MHz ECC or Non-ECC UDIMM, max. 128GB
- ▶ 2x NIC Module slots, 1x RJ45 Console port, 2x USB 3.0, and 4x Keypads

## Package Content

- ▶ 1x NCA-5230 Network Security Platform
- ▶ 1x Power Cable
- ▶ 1x Console Cable
- ▶ 1x SATA Cable
- ▶ Nameplate
- ▶ 1x Short Ear Rack Mount Kit with screws

## Optional Accessories Kits

Model	Description
IAC-AST2500E	IPMI Card
Riser Card Kit	PCIe*8 connector support PCIE*4 signal add-on card (Optional)
IAC-TPM04A	TPM Module Card
Slide Rail Kit	1U Slide Rackmount Rail Kit
Power Module Kit	Redundant DC Power Module Kit


## Ordering Information

SKU	Description
NCA-5230A	Intel® Comet Lake CPU, W480E CML-S PCH, 8x GbE, 8x SFP, 2x NIC Module, and 350W AC Redundant PSU
NCA-5230B	Intel® Comet Lake CPU, W480E CML-S PCH, 8x GbE, 8x SFP, 2x NIC Module, and 350W Single PSU
NCA-5230C	Intel® Comet Lake CPU, W480E CML-S PCH, 8x GbE, 8x SFP, 2x NIC Module, and 300W DC Redundant PSU

## System Specifications


<b>Form Factor</b>		1U 19" Rackmount
<b>Platform</b>	Processor Options	Intel® Core™ i9/i7/i5/i3 & Xeon® W CPUs
	CPU Socket	1x LGA 1200 Socket
	Chipset	CML-S W480E PCH
<b>BIOS</b>		AMI SPI Flash BIOS
<b>System Memory</b>	Technology	DDR4 ECC or Non-ECC UDIMM, up to 2933/2666MHz
	Max. Capacity	128GB
	Socket	4x 288-pin DIMM
<b>Networking</b>	Ethernet Ports	8x GbE RJ45, with 4x bypass feature 8x SFP
	NIC Module Slot	2 Slots
<b>LOM</b>	IO Interface	Share Ports with MGMT Ports, No IPMI Card (Default), Auto LOM Function with IPMI Card (Optional)
	OPMA slot	Yes
<b>I/O Interface</b>	Reset Button	1x Reset Button (Software reset control by GPIO)
	LED Indicator	Power/Status/Storage, refer to <a href="#">Appendix A</a>
	Power Button	1x ATX Power Switch
	Console Port	1x RJ45 Console Port
	USB Port	2x USB 3.0 Ports
	LCD Module	4x Keypads, 16x2 Character LCD
	Display	From OPMA Slot (Optional)
	Power Input	AC/DC Power Inlet on PSU
<b>Storage</b>	HDD/SSD Support	2x 2.5" Internal Bays
	Onboard Slots	1x M.2 (SATA) 2242/2280 B+M Key
<b>Expansion</b>	PCIe	1x PCIe*4 signal FH/HL (Optional)
	mini-PCIe	N/A
	SIM card Slot	N/A
<b>Miscellaneous</b>	Watchdog	Yes
	Internal RTC with Li Battery	Yes
	TPM	Yes (Optional)
<b>Cooling</b>	Processor	Passive CPU heat sink
	System	4x cooling fans with smart fan
<b>Environmental Parameters</b>	Temperature	0~40°C Operating, -40~70°C Non-Operating
	Humidity (RH)	5~90% Operating, 5~ 95% Non-Operating
<b>System Dimensions</b>	Size (WxDxH)	438mm x 468mm x 44mm
	Weight	7.6kg
<b>Package Dimensions</b>	Size (WxDxH)	739mm x 582mm x215mm
	Weight	15.8 kg
<b>Power</b>	Type/Watts	SKU A: 350W AC Redundant PSU SKU B: 350W Single PSU SKU C: 300W DC Redundant PSU
	Input	AC 90V~264V @47~63Hz;
<b>Approvals and Compliance</b>		RoHS, CE/FCC Class A, UL, UKCA

## Front Panel

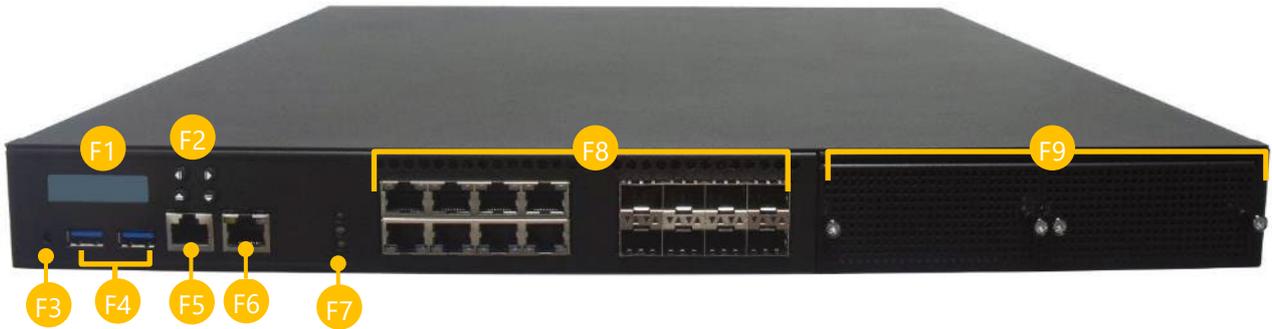

No.	Description	
F1	LCM	16x2 character LCM
F2	Keypad	4x keypad
F3	Reset Button	1x Reset Button
F4	USB Port	2x USB 3.0 ports
F5	Console Port	1x RJ45 Console Port
F6	MGMT Port	1x RJ45 MGMT Port; Shared IPMI port (Optional)
F7	LED Indicators	
F8	LAN Port	8x RJ45 Ports, 8x SFP Ports
F9	NCS2 Module	2x STD NIC Module


## Rear Panel

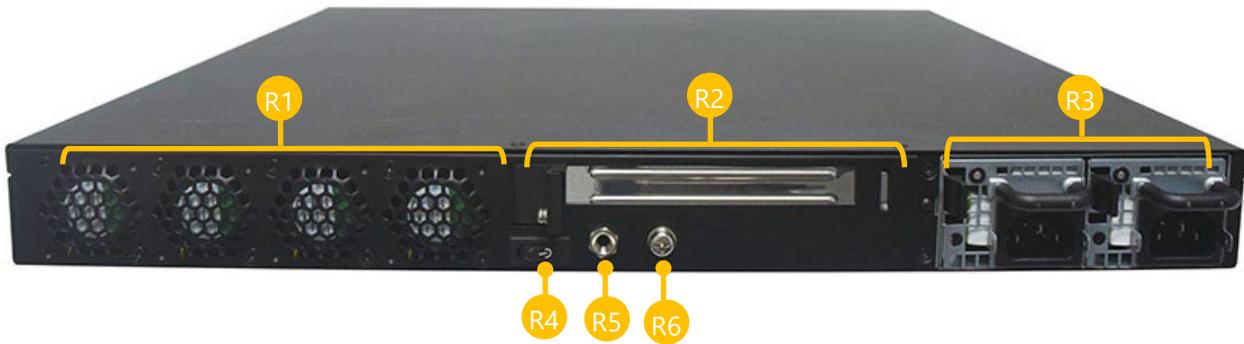

No.	Description	
R1	Cooling Fan	4x cooling fans with SMART function
R2	PCIe Expansion Slot	Optional FH/HL Size PCIe Slot for 1x PCIe8 or 2x PCIe4
R3	Power Supply	SKU A: 350W AC Redundant PSU; SKU B: 350W Single PSU; SKU C: 300W DC Redundant PSU
R4	Power Switch	1x Slim Type ATX Power Switch
R5	ESD Jack	1x Semi-shearing hole for ESD screws
R6	Grounding Hole	1x Semi-shearing hole for grounding screws


# Motherboard Information

## Block Diagram

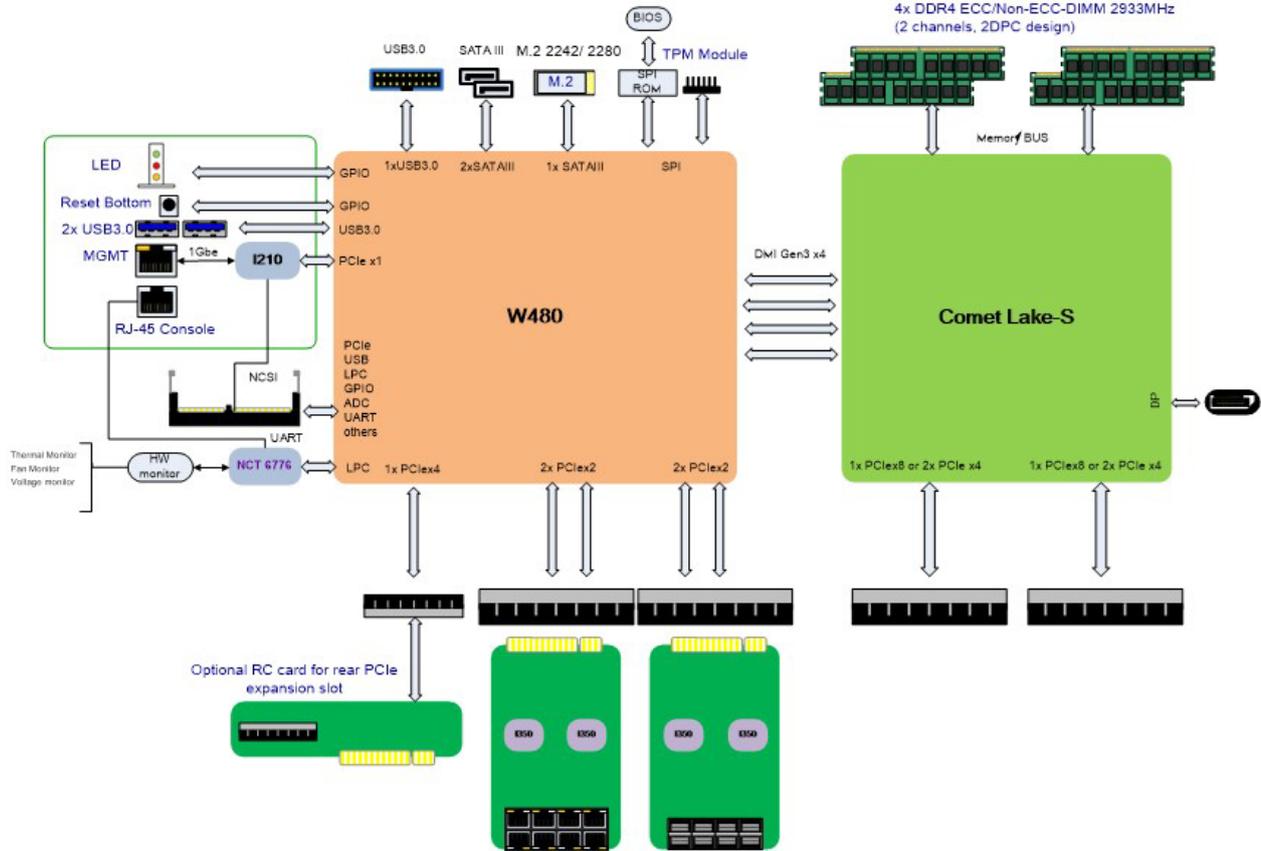

## Motherboard Layout

The motherboard layout shows the connectors and jumpers on the board. Refer to the following picture as a reference for the pin assignments and the internal connectors.

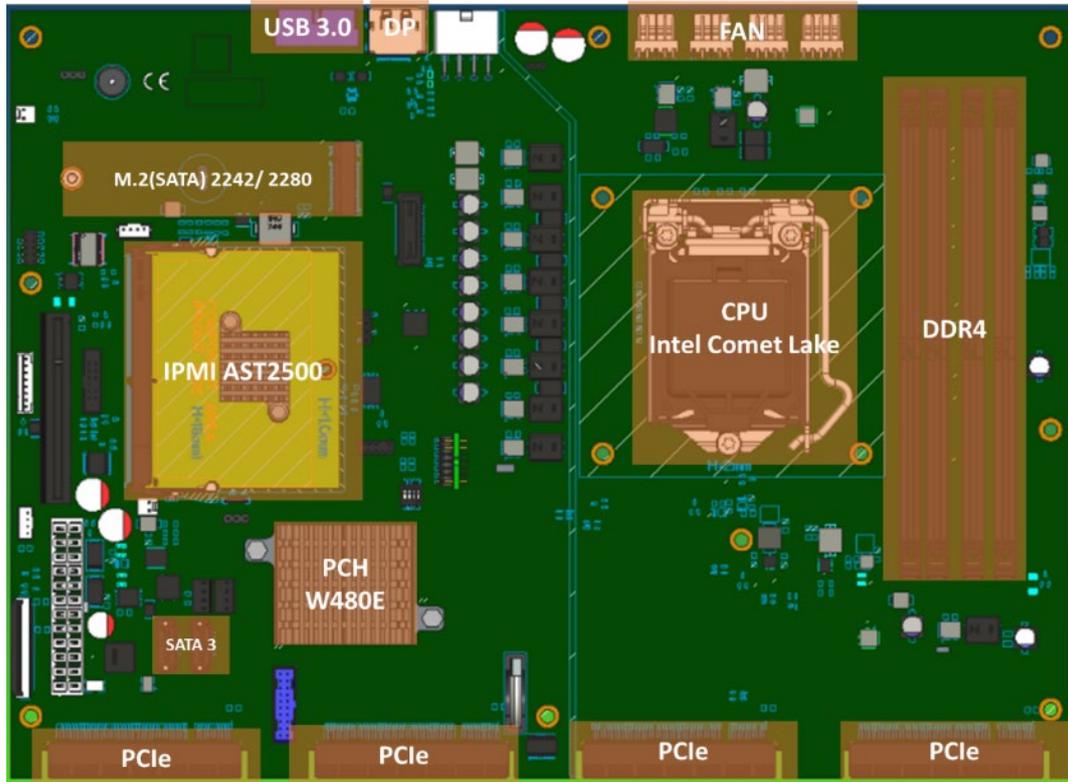

## Internal Jumpers & Connectors

The pin headers on the motherboard are often associated with essential functions. With the shunt (Jumper) pushed down on the designated pins (the pin numbers are printed on the circuit board, surrounding the pin header), particular features can be enabled or disabled. While changing the jumpers, make sure your system is turned off.

### Jumper Setting

To short the designated pins, push the jumper down on them so that they become **SHORT**. To make the pins setting **OPEN**, simply remove the jumper cap.

2-pin Header		3-pin Header		4-pin Header	
Open	Short	Open	(1-2) Jumped	Open	(1-2) Jumped

**1. JRST1:** Reset (Default 2-3)

Controls the reset method of the Reset button on the panel

Pin No.	Description
1-2	HW Reset
2-3	SW Reset (Default)

**2. JPWR1:** Power – ON Button (Must be connected)

**3. JUSB3:** USB 3.0 Pin Header (2 Ports)

**4. DP1 (not stuff):** Display Port Connector

**5. JATX1:** 8-Pin ATX 12V Power CONN (must be connected)

**6. J1:** For setting JPCIESL3 / JPCIESL4 PCIe x8/x16 Setting

J1	Pin 1-2 Jumped	Pin 2-3 Jumped (Default)
JPCIESL3	x16	x8 or x4x4
JPCIESL4		x8

**7. JFAN4:** PWM FAN 4

**8. JFAN3:** PWM FAN3

**9. JFAN2:** PWM FAN2

**10. JFAN1:** PWM FAN 1

**11. M.2\_CN1:** M.2 (SATA) 2242/2280 B-Key

**12. XDP1 (not stuff):** XDP Connectors

**13. JDDR0:** DDR4 Channel 0 DIMM0

**14. JDDR1:** DDR4 Channel 0 DIMM1

**15. JDDR2:** DDR4 Channel 1 DIMM0

**16. JDDR3:** DDR4 Channel 1 DIMM1

**17. JCOM1:** Serial Port COM2 Pin Header (Optional with JLCM1)

**18. JBMC1 (only for BMC debug):** BMC Debug Connector

**19. U9:** Super I/O NCT6776F

**20. U3311:** Comet Lake S CPU LGA1200 Socket

**21. Power I2C:** Power I2C Debug Connector

**22. JPMBUUS1:** ATX PMBus Pin Header

Pin No.	Description
1	TTL1
2	TTL2
3	NC
4	GND
5	NC
6	PMBUS_CLK
7	PMBUS_DATA
8	NC

**23. JRISER1:** PCH PCIe GEN3 Slot (only x4)

**24. JVGA1:** BMC VGA CONN1

Pin No.	Description	Pin No.	Description
1	CRT_RED	2	GND
3	CRT_GREEN	4	GND
5	CRT_BLUE	6	GND
7	HSYNC	8	NC
9	VSYNC	10	GND
11	DDC_DATA	12	DDC_CLK

**25. OPMA1:** IPMI AST2500 Socket

**26. J80P1:** 80Port Pin Header

Pin No.	Description	Pin No.	Description
1	CLK	2	LPC AD1
3	PLTRST	4	LPC AD0
5	LPC FRAME	6	3.3V
7	LPC AD3	8	--
9	LPC AD2	10	GND

**27. JSPI\_TPM1:** BIOS Update / TPM 2.0 Pin Header

Pin No.	Description	Pin No.	Description
1	--	2	NC
3	SPI CS0	4	3.3V
5	SPI MISO	6	SPI HOLD
7	--	8	SPI CLK
9	GND	10	SPI MOSI
11	TPM IRQ	12	--
13	TPM CS	14	PLTRST

**28. JLCM1:** UART LCM Connector (Optional with JCOM1)

Pin No.	Description
1	TXD
2	RXD
3	GND
4	5V

**29. JOPEN1:** Case Open Function Pin Header

**30. JCMOS1:** Clear the RTC CMOS

Pin No.	Description
1-2	Normal
2-3	Clear CMOS

**31. JATX2:** 24 Pin ATX Power CONN (must be connected)

**32. U3313:** PCH W480E

**33. JIO1:** I/O Connector for IO-52301

**34. JSATA PW1:** SATA 5V Power Connector (only provide 5V)

**35. JSATAPW2:** SATA 5V Power Connector (only provide 5V)

Pin No.	Description
1	NC
2	GND
3	GND
4	5V

**36. U4:** I210 for MGMT (via PCIe) or IPMI LOM Port (via NCSI)

**37. JSATA1:** SATA3 CONN

**38. JSATA2:** SATA3 CONN

**39. JUSB2:** USB 3.0 Connector (only for IO-52301)

**40. JPCIESL1:** PCH PCIe GEN3 Slot, support x2x2

**41. JPCIESL2:** PCH PCIe GEN3 Slot, support x2x2


**42. BAT1:** Battery

**43. JPCIESL3:** CPU PCIe GEN3 Slot, support x8 (if J1 short Pin 2/3) or x16 (if J1 short Pin 1/2)

**44. JPCIESL4:** CPU PCIe GEN3 Slot, support x8 (if J1 short Pin 2/3) or x16 (if J1 short Pin 1/2)

J1	Pin 1-2 Jumped	Pin 2-3 Jumped (Default)
JPCIESL3	x16	x8 or x4x4
JPCIESL4		x8

## IO Board

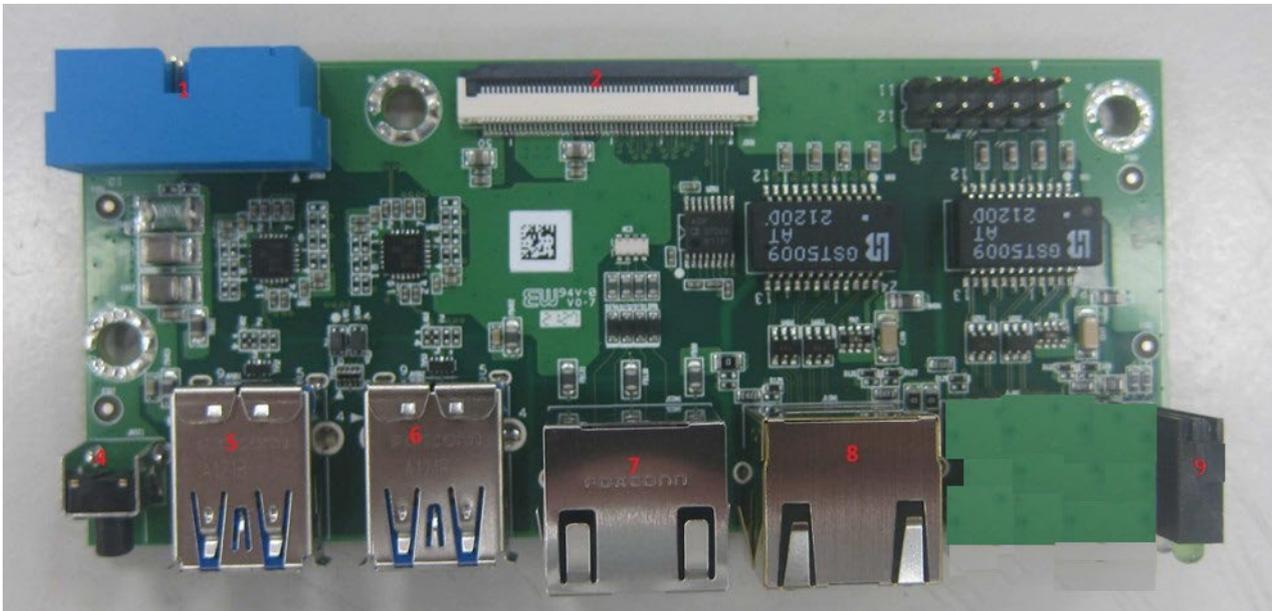

**1. JUSB3:** INT USB 3.0 Pin Header (2 Ports)

**2. JIO1:** 3.3V / USB OVC / LED / MDI / Console / Reset Connector

Pin No.	Description	Pin No.	Description
50	+V3P3S	25	GND

49	+V3P3S	24	GND
48	+V3P3S	23	I210_MDI_0P
47	+V3P3S	22	I210_MDI_0N
46	NC	21	GND
45	NC	20	I210_MDI_1P
44	+V3P3A	19	I210_MDI_1N
43	+V3P3A	18	GND
42	+V3P3A	17	I210_MDI_2P
41	+V3P3A	16	I210_MDI_2N
40	+V3P3A	15	GND
39	+V3P3A	14	I210_MDI_3P
38	+V3P3A	13	I210_MDI_3N
37	+V3P3A	12	GND
36	+V3P3A	11	I210_LINK_100M_N
35	+V3P3A	10	I210_LINK_ACT_N
34	+V3P3A	9	I210_LINK_1G_N
33	+V3P3A	8	GND
32	NC	7	NC
31	USB_OC_0_N	6	FP_COM1_CTS_N
30	CTR_YLM_R	5	FP_COM1_RXD
29	CTR_GRN_R	4	FP_COM1_TXD
28	HD_LED_N	3	FB_RESET#
27	GND	2	FP_COM1_RTS_N
26	GND	1	GND

**3. LAN2:** INT MGMT Port Pin Header

**4. JRST1:** Reset Button

**5. JUSB1:** USB 3.0 5G

**6. JUSB2:** USB 3.0 5G

**7. JCOM1:** Console Port (Baud Rate: 115200)

**8. JLOM1:** MGMT/IPMI LOM Port

**9. LED1:** Power / Status / HDD LED

LED1		
Top	Power	Green
Middle	Status	Green/Red
Bottom	HDD	Yellow

## CHAPTER 2: HARDWARE SETUP

To reduce the risk of personal injury, electric shock, or damage to the system, please remove all power connections to shut down the device completely. Also, please wear ESD protection gloves when conducting the steps in this chapter.

### Opening the Chassis

1. Unscrew the two (2) screws on the rear top side of the system panel.



2. Gently push the chassis cover back by a bit.




3. Lift the cover up to remove.



## Installing the CPU, Heatsink, and Fan Duct

The system supports Intel® Core™ i9/i7/i5/i3 & Xeon® W CPU. Follow the instructions to install the processor, heatsink, and fan duct

1. Locate the CPU on the motherboard. Remove the plastic socket protection cap.

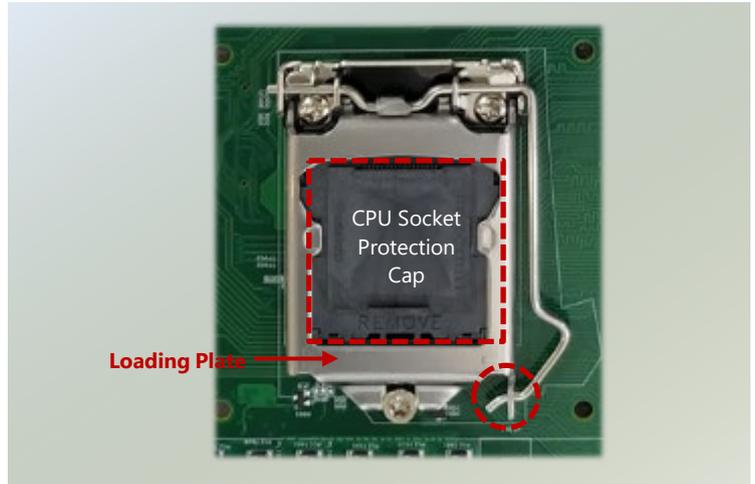

2. Release the socket lever by pushing down and sliding it under the load plate notch and lift open the processor load plate.




3. Gently extract the processor from its packaging, carefully hold it by its edges and taking care not to touch any processor contacts. Make sure the golden triangular mark is aligned with the white one marked on the motherboard and then insert it into the socket.




4. After the processor is correctly seated in the socket, lower the load plate over the processor, and lock down the load plate by sliding it under the notch.


5. Next, prepare the fan duct. Fold on the dotted lines.

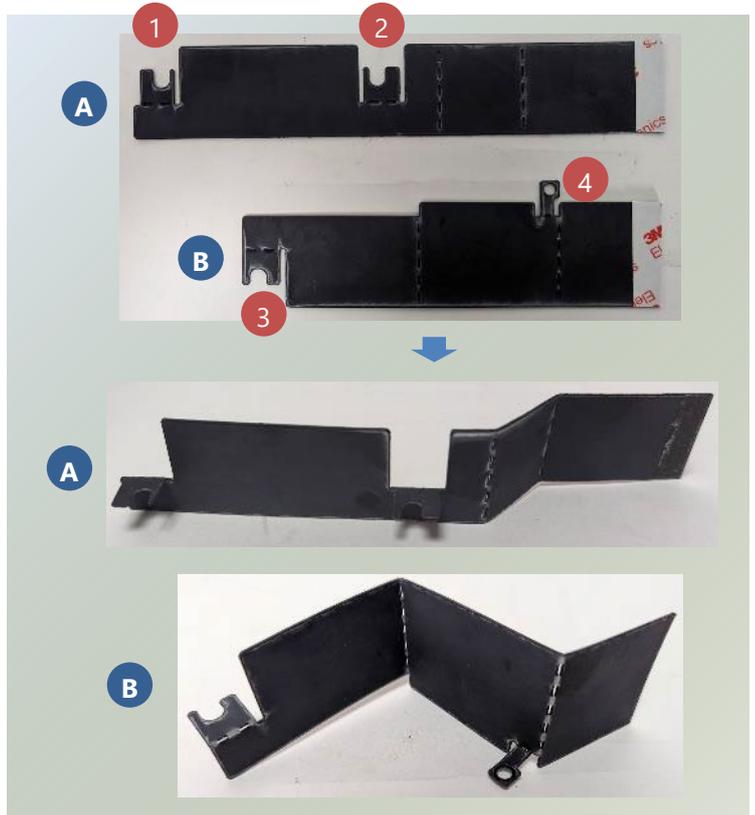

6. Prepare the heat sink, and place the heat sink on top of the CPU socket. Place the sticker end of the fan duct part A & B to the sides of the fan, and align to the screw holes on the heat sink.

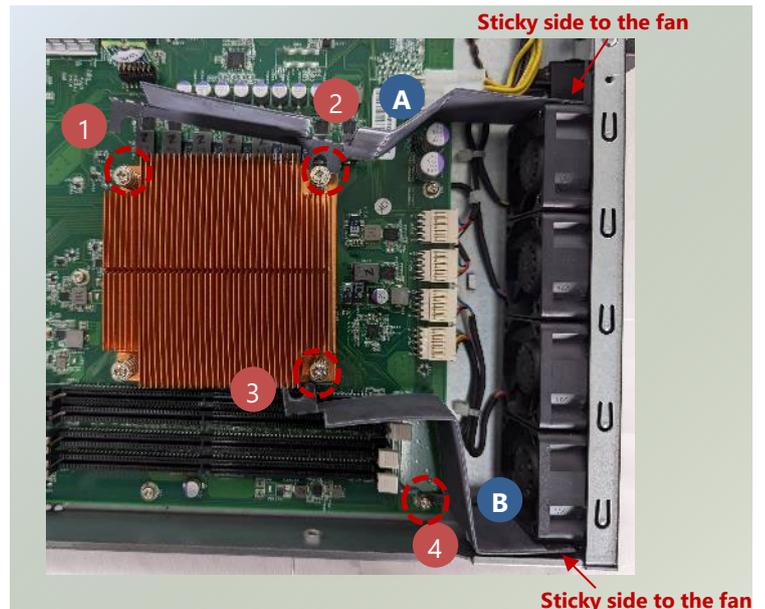

7. Gently apply equal pressure on the heat sink and tighten the four screws on the heat sink, and one screw #4 on the fan duct.

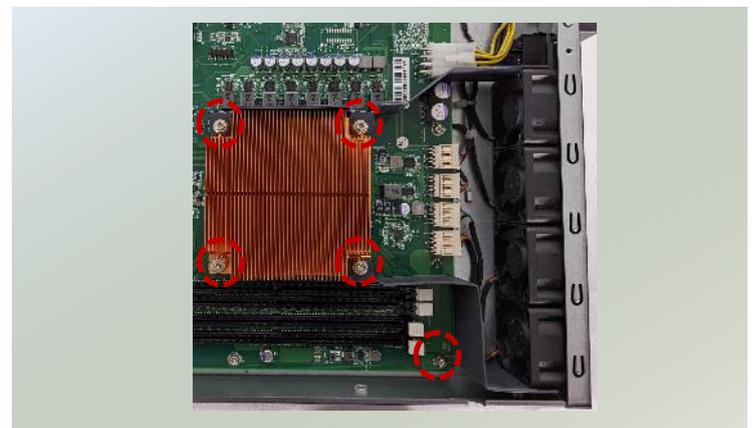


## Installing the System Memory

The motherboard supports 4 memory slots for DDR4 UDIMM with speeds of up to 2933MHz. The CPU requires at least 2 memory modules to boot and run from.

### Supported System Memory Summary

Total Slots	4
Number of Channels	2 (2 DIMMs per channel)
Supported DIMM Capacity	4GB, 8GB, 16GB, 32GB
Memory Size	Maximum 128 GB UDIMM (32GB*4)
Memory Type	DDR4 ECC or Non-ECC UDIMM, up to 2933MHZ
Minimum DIMM Installed	At least 2 memory modules to boot and run from

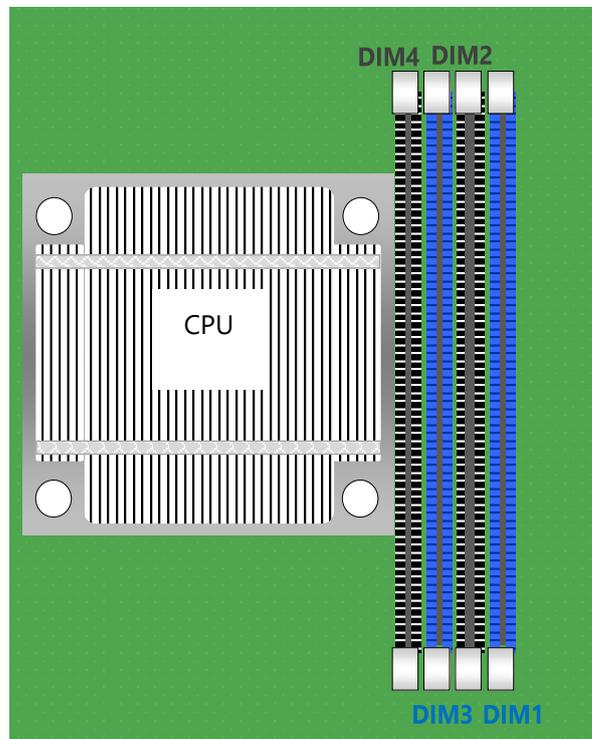

### DIMM Population Guidelines

- Please install even number of DIMMs following the memory module installation instructions to install the DIMMs
- Use memory modules of the same capacity, speed, and from the same manufacturer to avoid compatibility issues and to achieve optimal CPU performance.

**Recommended DIMM Population Scheme**


The table below shows the recommended schemes for DIMM population. To guarantee balanced system performance, please install identical DIMMs of the same capacity, speed, number of ranks, and from the same manufacturer.

SLOT #	DIM4	DIM3	DIM2	DIM1
2 DIMMs		○		○
4 DIMMs	○	○	○	○


**Memory Module Installation Instructions**

Please follow the steps below to install the DIMM memory modules.

1. Power off the system, open the chassis cover.
2. Pull open the DIMM slot latches.
3. Align the notch of the module with the socket key in the slot and carefully insert the card into the slot.

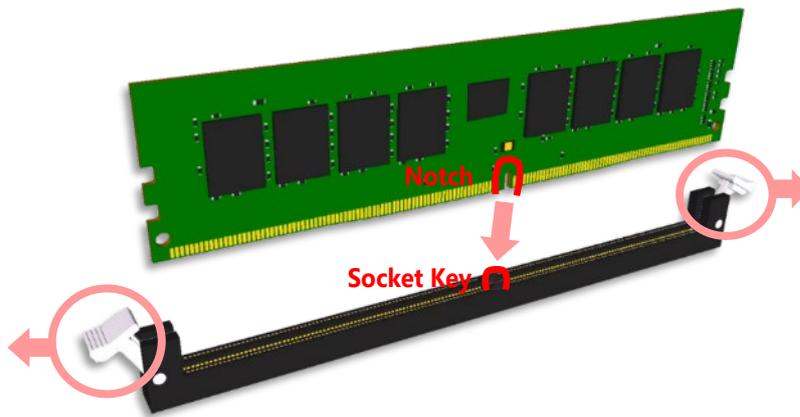


4. Push the module down into the slot until it is firmly seated. Press vertically on both corners of the card until it clicks into place.

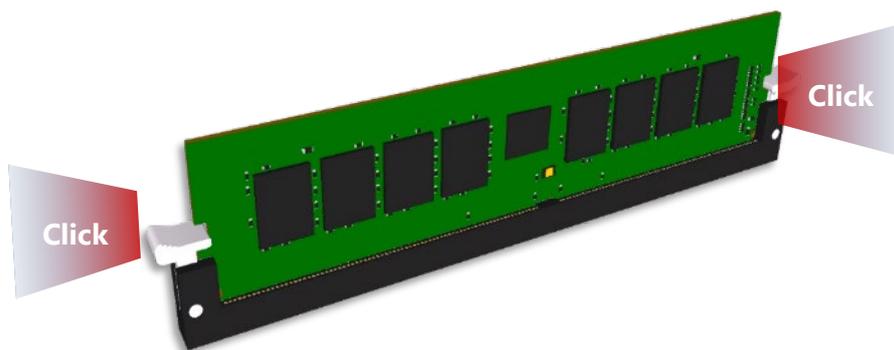


## Installing the IPMI Card (Optional)

This system supports an IPMI module card through the **OPMA1** slot, allowing system administrators to remotely manage and monitor system health.


1. Power off the system and open the chassis cover. Locate the IPMI socket on the motherboard.

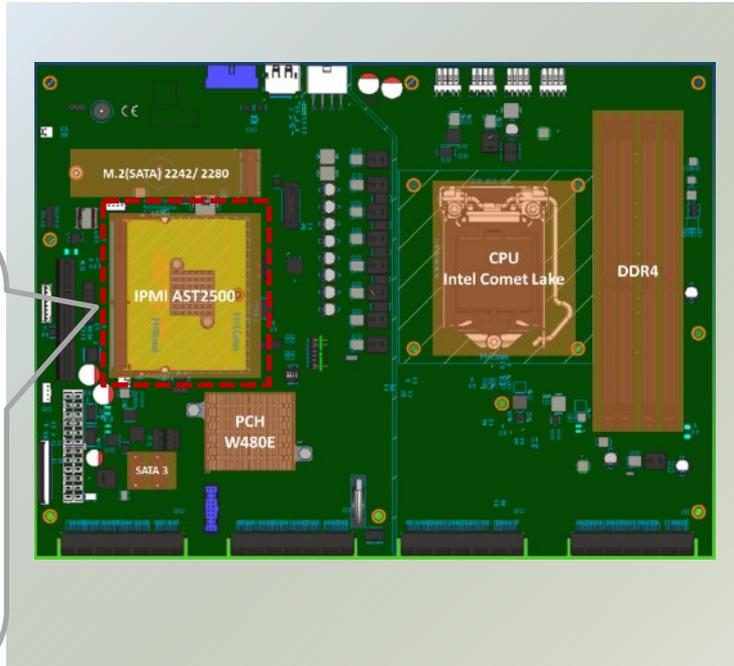

2. Insert the IPMI module card at 30-degree angle, into the socket until it is fully seated in the connector.

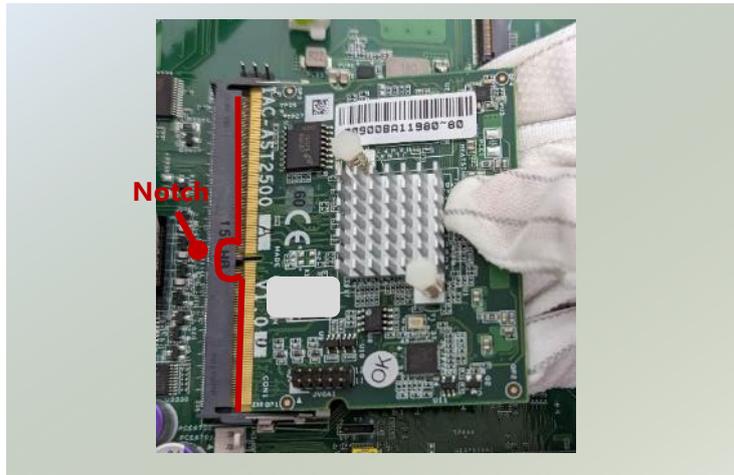


3. Vertically press down on the module card and secure it with 1 (one) screw.

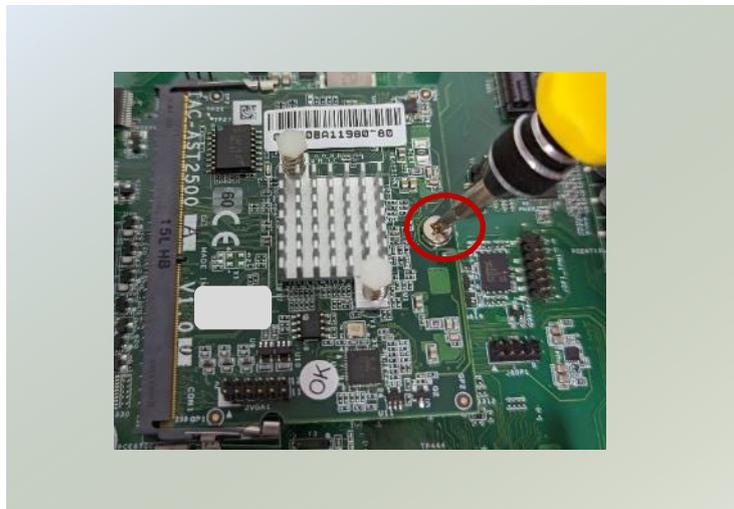


## Installing the TPM Module (Optional)

This system supports one TPM module card through the **TPM** slot. Follow the procedures below for installing the TPM module card.

1. Power down the system and open the chassis cover. Locate the TPM pins on the motherboard.

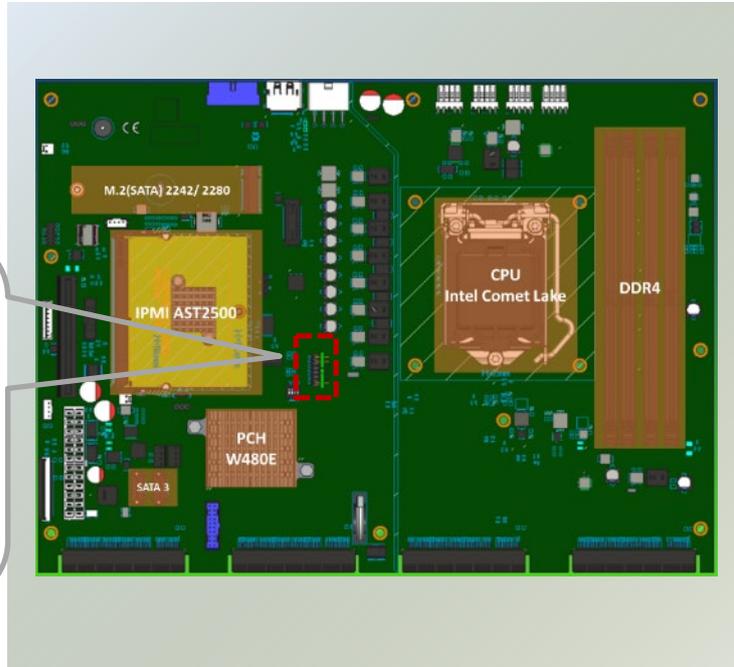


2. Insert the module into the TPM pins until it is firmly seated.

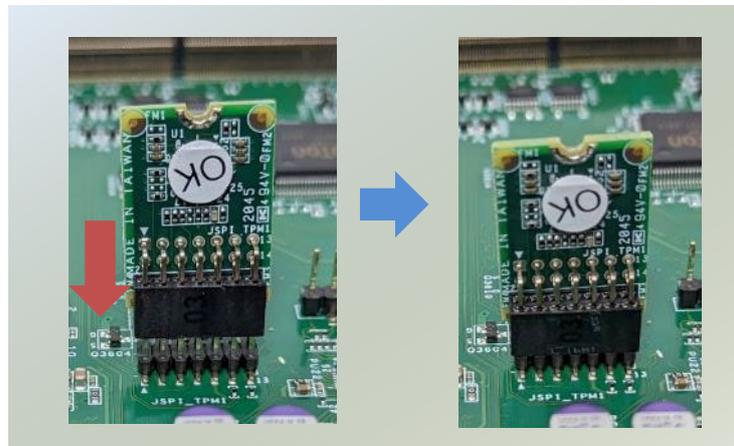


## Installing the M.2 Storage Card

This appliance system supports the M.2 storage module card (2242/2280 B+M Key) through the **M2\_1** slot.


1. Power off the system and open the cover. Locate the M.2 slot on the motherboard.

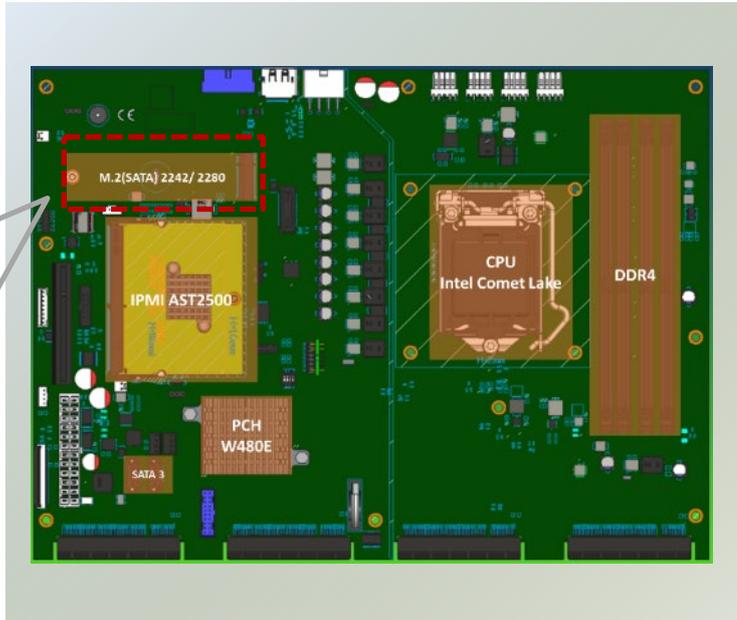

2. Align the notch of the storage card with the socket in the pin slot.
3. Insert the storage card pins at a 30-degree angle into the socket until it is firmly seated.

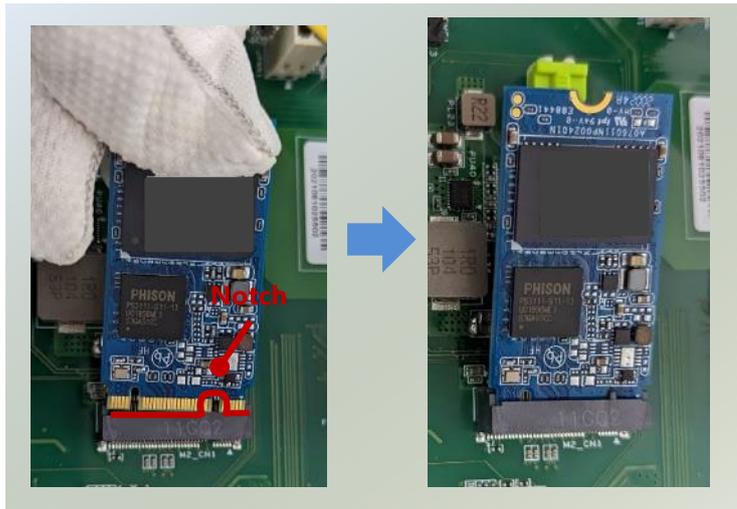

4. Vertically push down on the module and secure with the clip.

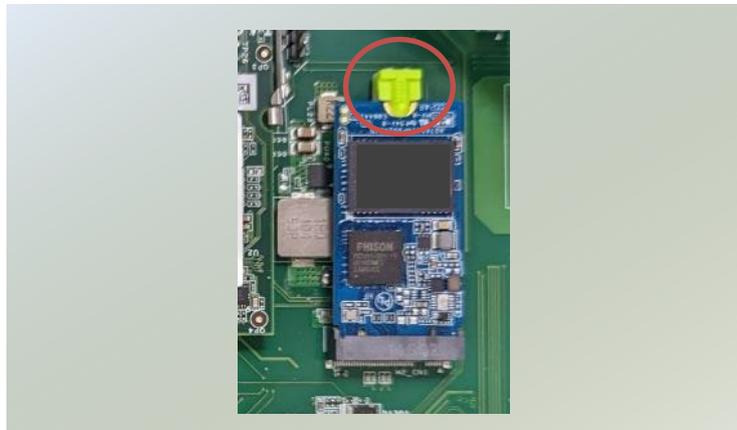

## Installing the Disk Drive(s) (Optional)

The HDD/SSD bay supports two 2.5" SATA HDDs or SSDs as data storage. Please follow the steps below for installation.


1. Power off the system and open the chassis cover. Locate the 2.5" disk trays on the **lower left side** inside the system.



2. Loosen the three (3) screws that secures the tray onto the motherboard. Take the tray out and prepare to install the disk drives.




3. The tray will have its bottom side facing up, mount the disk drives in the tray. Make sure the **SATA Contacts** (for SATA data cables and power cables) are facing outwards. Apply two (2) disk crews with rubber washers on each side of the disk drive.

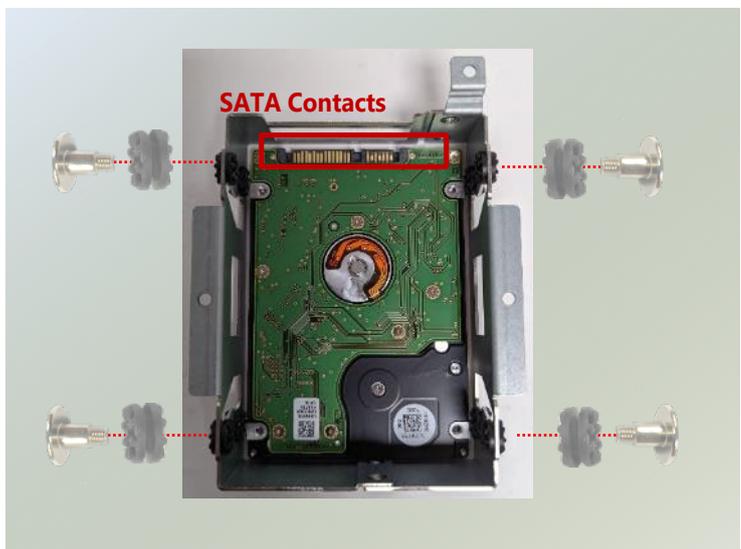


Note: If you are going to install two disk drives, always start by installing the disk in the lower (bottom) slot.


4. Attach the SATA data cables and the SATA power cables to the HDD/SSD disks.

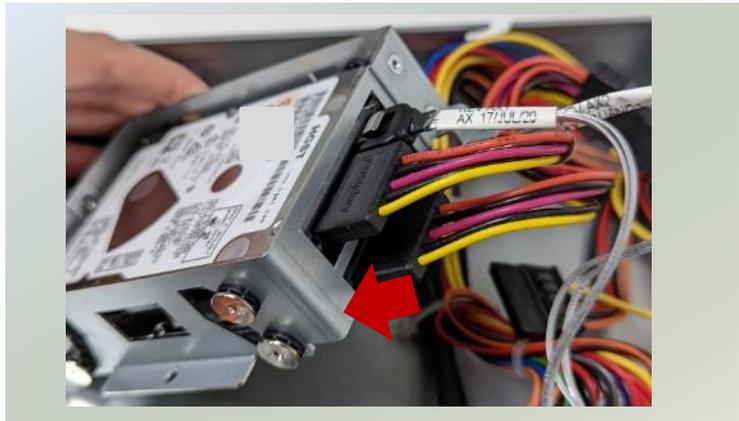

5. Place the tray with the disk drives installed, back to its original spot inside the system. Secure with the original three (3) screws.

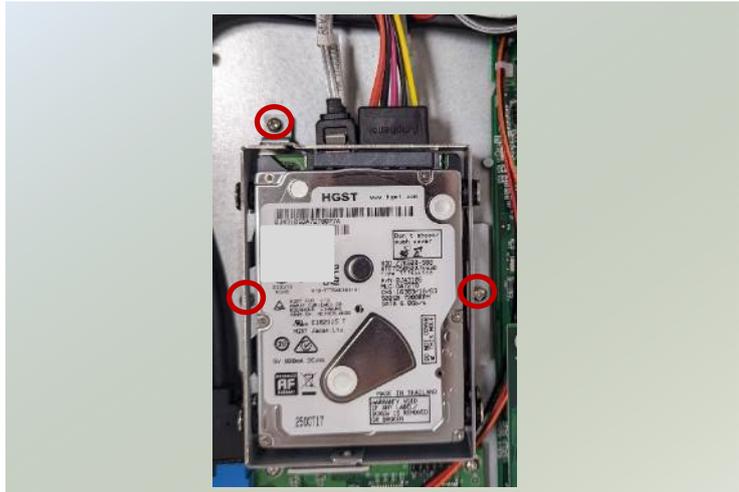

6. Then, insert the data cable ends into the corresponding connectors on the motherboard.

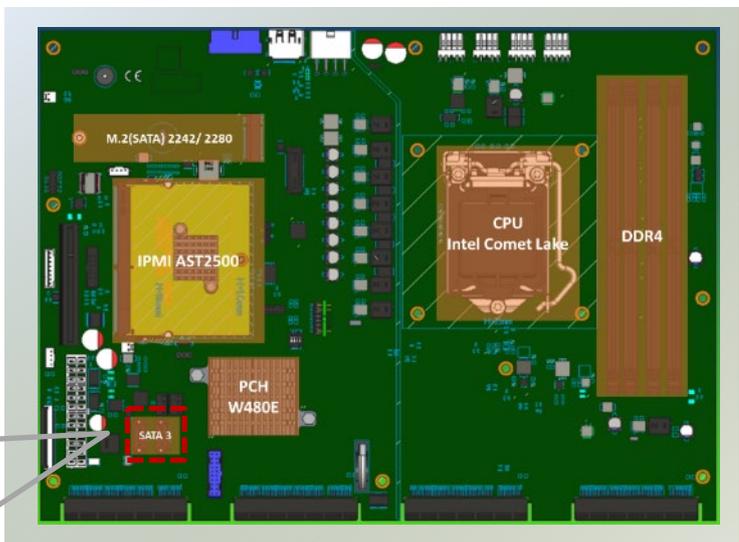

## Installing the NIC Modules

This system can accommodate four **NIC** slim type modules on the front panel, with Slot 1 and Slot 2 occupied by LAN ports (8x RJ45 & 8x SFP ports). Please see Slot layout and PCIe Interface:



	Slot 1	Slot 2	Slot 3	Slot 4
<b>PCIe Interface</b>	x2x2	x2x2	x8 or x4x4	x8

1. Locate the NIC module slot on the front panel.



2. Rotate the two lock-screws counter-clockwise and loosen them to remove the door.



3. Insert your NIC module. (The module shown in the image is for reference only)




4. Once the module is firmly seated, rotate clockwise and tighten the two lock-screws.



## Replacing the Power Supply

Power supply units may wear down eventually. Please be noted that this system supports 350W AC or 300W DC PSU. Please prepare the power supply units matching this capacity.

1. On the rear panel, locate the power supply units and disconnect the power cords.
2. Pull the original power supply unit out and replace it with the new one.

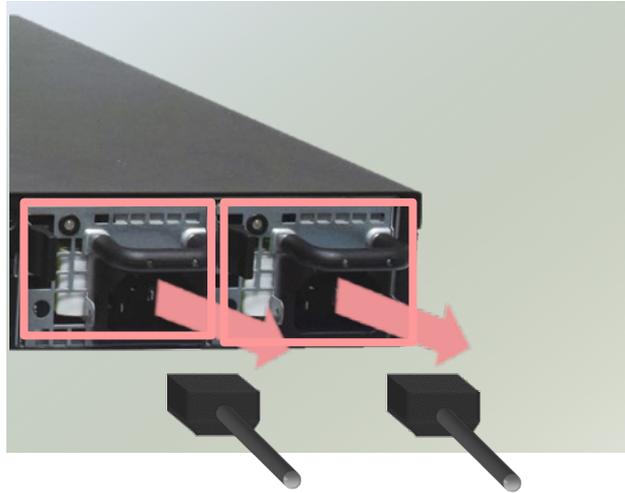


## Mounting the System

There are various methods to mount this system based on your application and the environment. This system came with two types of mounting kits for a typical rack or enclosure mounting installation or installing this system in a rack:

### ► Ear Brackets


This method is quick and easy by fixing this system to the front posts of the rack while being the most unstable method, for the bracket assembly alone cannot provide sufficient support to the chassis. Please ensure the use of these brackets goes with a shelf or slide rails to prevent the chassis from falling over.

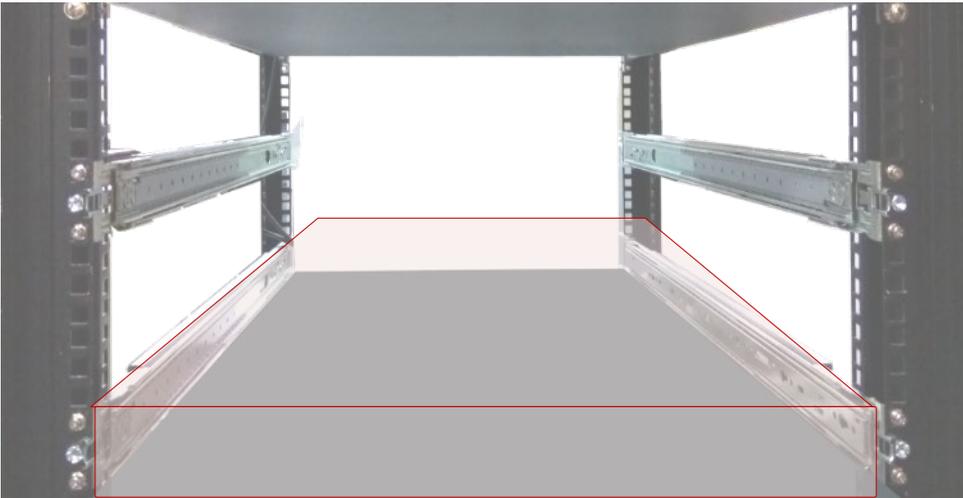

The system shall be installed on the rack along with a shelf or slide rails, for the "Mounting Ears" are meant to secure the system, not to support it.

### ► Slide Rail Kit + Short Ear Brackets

The slidable rails allow you to access the system easily while solidly securing it on the rack.

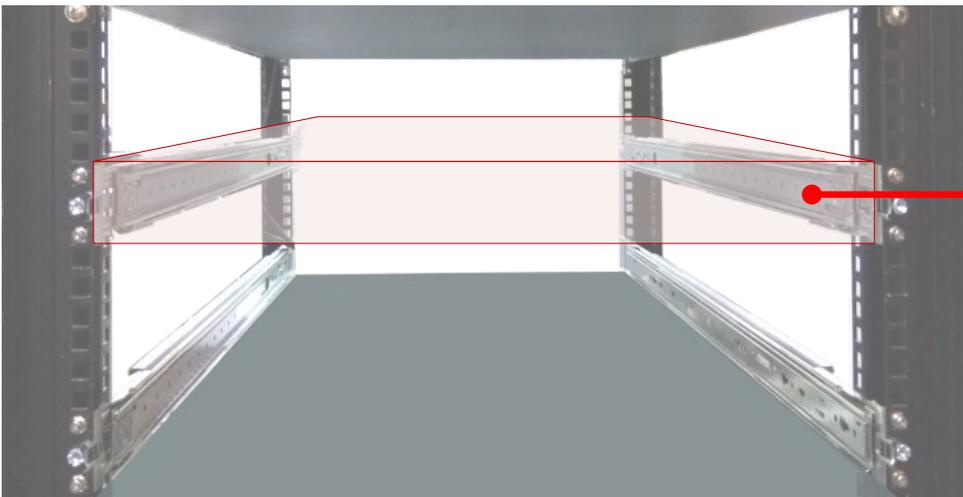


The Slide Rail Kit can secure the system while providing sufficient weight support for the device.

## Attaching the Ear Brackets

The Ear Brackets come with six screws, as shown below.



Take an ear bracket, align the holes on it with those on the side of the system, and lock it onto the system with three provided screws. Do the same to the other ear bracket.

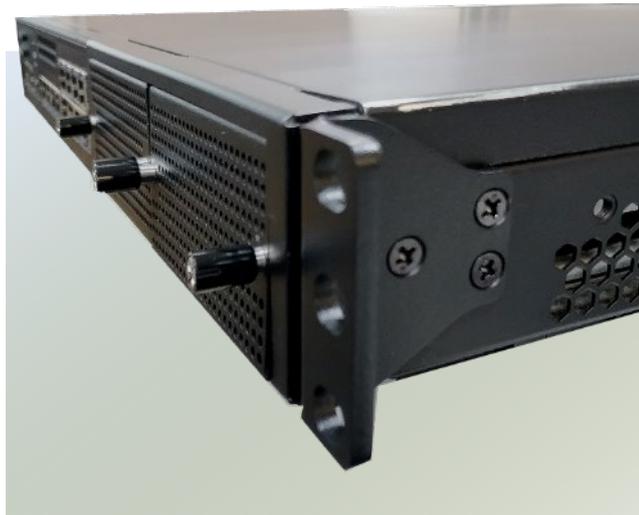

## Slide Rackmount Rail Kit

The slide rail kit shall include the following items:

- ▶ 1 x pack of [FL00IJ0-A](#) screws (for securing the sliding rails on the unit)



- ▶ 2 x Slide-Rails



Note

If any component is missing or damaged, please contact your dealer immediately for assistance.

**Fully stretched slide rail:**



**Attaching Rail Brackets**

- 1. Unpack a slide rail and slide the inner channel to its end.



- 2. Slide the rail bracket out to its end.



- 3. To detach the rail bracket from the channel, locate and push the Release Tab on the rail bracket while sliding it out.



- 4. Align the rail bracket to the side of the chassis and make sure the screw-holes are matched, and then secure the bracket onto the chassis with 3 provided screws.




- 5. Repeat Steps 1~4 to attach the rail bracket to the other side of the chassis.




### Installing the Slide Rail Assemblies

1. This slide-rail kit does NOT require screw-fixing. Aim at 3 available screw holes on the rack front and lock it by clipping the rail's front end to the post, as shown in the image below. You should hear a "click" sound once it is firmly attached.

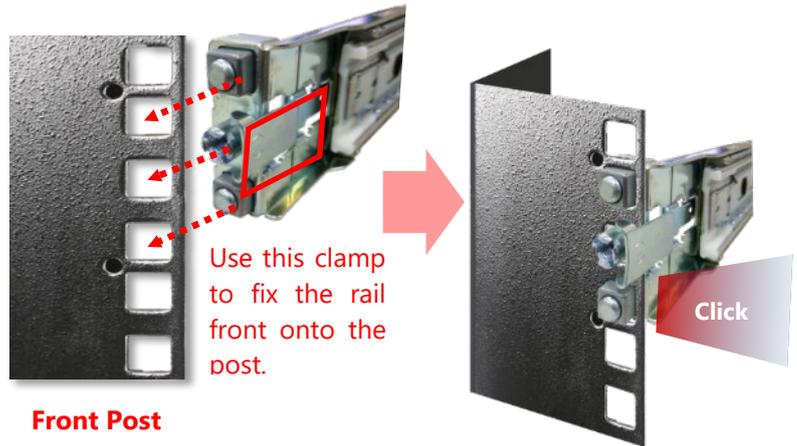


2. For the rear rack installation, slide the rail to aim and engage the bolts on the rail's rear end with the 2 available holes on the post, and the rail assembly will click into place.

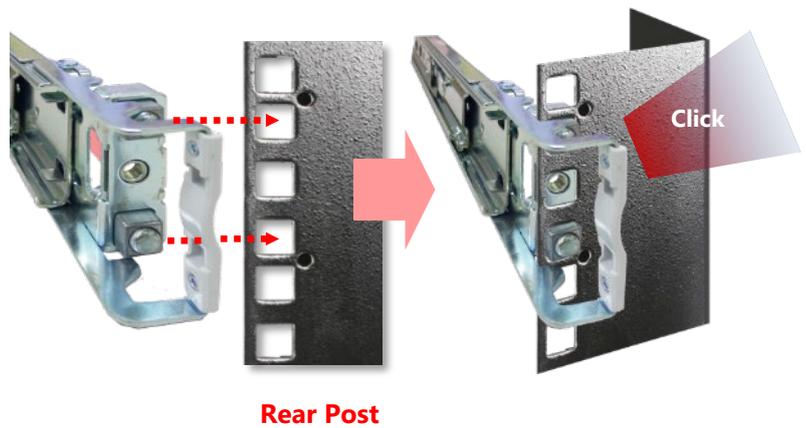

3. Repeat Step 1~2 to install the other rail onto the post.

### Installing the Chassis onto the Rack

1. Stretch both of the inner channels out to their fullest extent. You will hear a click sound when they are fully stretched and locked.

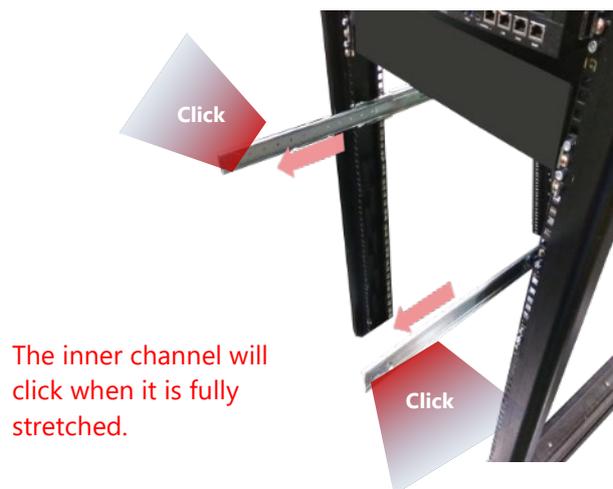


2. Hold the chassis with its front facing you, lift and gently insert it by aligning with the slide-rail assemblies as shown in the image, and then push the unit into the cabinet.



3. Keep sliding the rails in until they stop about halfway. Press down the metal clips on both inner channels and push them further into the cabinet.



4. To have the chassis completely inserted into the rack, pull and hold the Rail Lock tab on both brackets while pushing in the chassis.

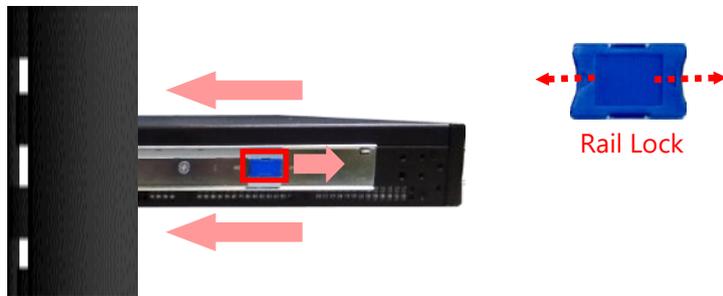

To detach the chassis from the rack, pull the Release Tabs on both sides of the brackets towards you while gently sliding the chassis out.



## CHAPTER 3: SOFTWARE SETUP


### BIOS Setup

The system has AMI BIOS built-in, with a SETUP utility that allows users to configure required settings or to activate certain system features. Pressing the <Tab> or <DEL> key immediately allows you to enter the Setup utility.

Control Keys	Description
→←	select a setup screen, for instance, [Main], [Advanced], [Chipset], [Security], [Boot], [Save & Exit], [Event Logs], and [Server Mgmt]
↑↓	select an item/option on a setup screen
<Enter>	select an item/option or enter a sub-menu
+/-	to adjust values for the selected setup item/option
F1	to display General Help screen
F2	to retrieve previous values, such as the parameters configured the last time you had entered BIOS.
F3	to load optimized default values
F4	to save configurations and exit BIOS
<Esc>	to exit the current screen

## Main Page


Setup main page contains BIOS information and project version information.

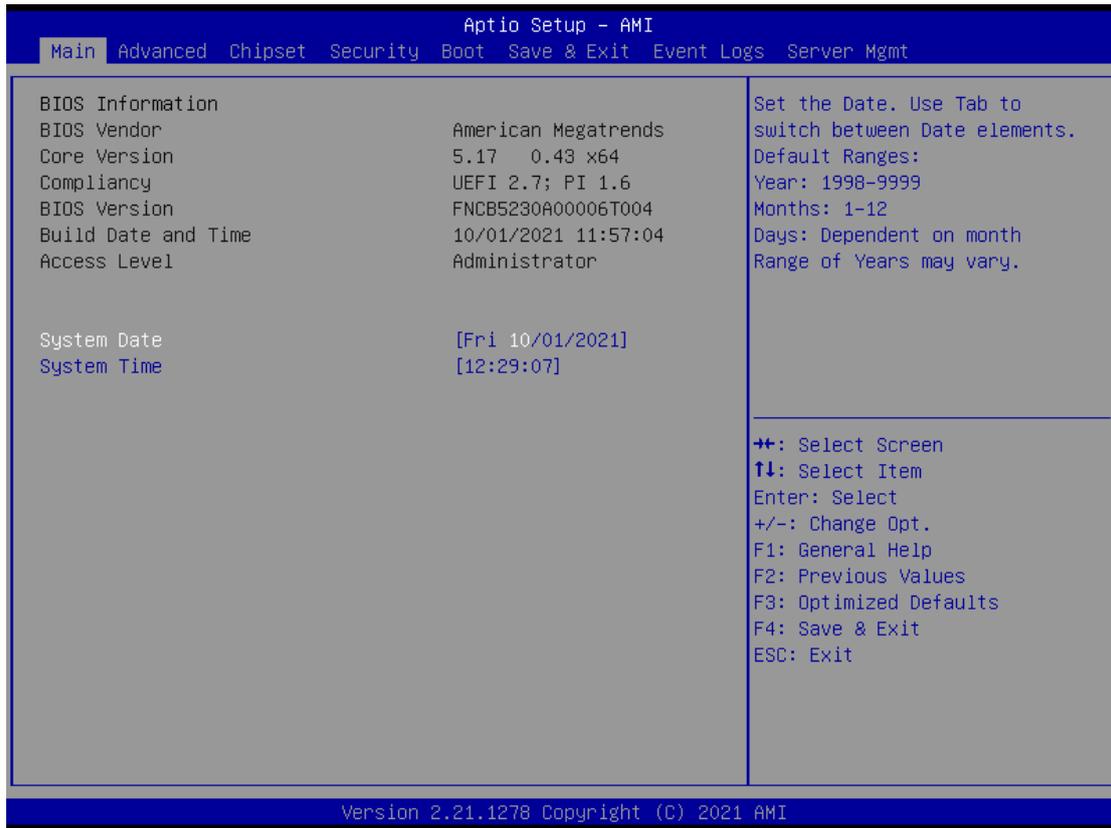



Feature	Description
BIOS Information	BIOS Vendor: American Megatrends Core Version: AMI Kernel version, CRB code base, X64 Compliancy: UEFI version, PI version Project Version: BIOS release version Build Date and Time: MM/DD/YYYY Access Level: Administrator / User
System Date	To set the Date, use <Tab> to switch between Date elements. Default Range of Year: 2005-2099 Default Range of Month: 1-12 Days: dependent on Month.
System Time	To set the Date, use <Tab> to switch between Date elements.

## Advanced Page

Select the Advanced menu item from the BIOS setup screen to enter the “Advanced” setup screen. Users can select any of the items in the left frame of the screen.

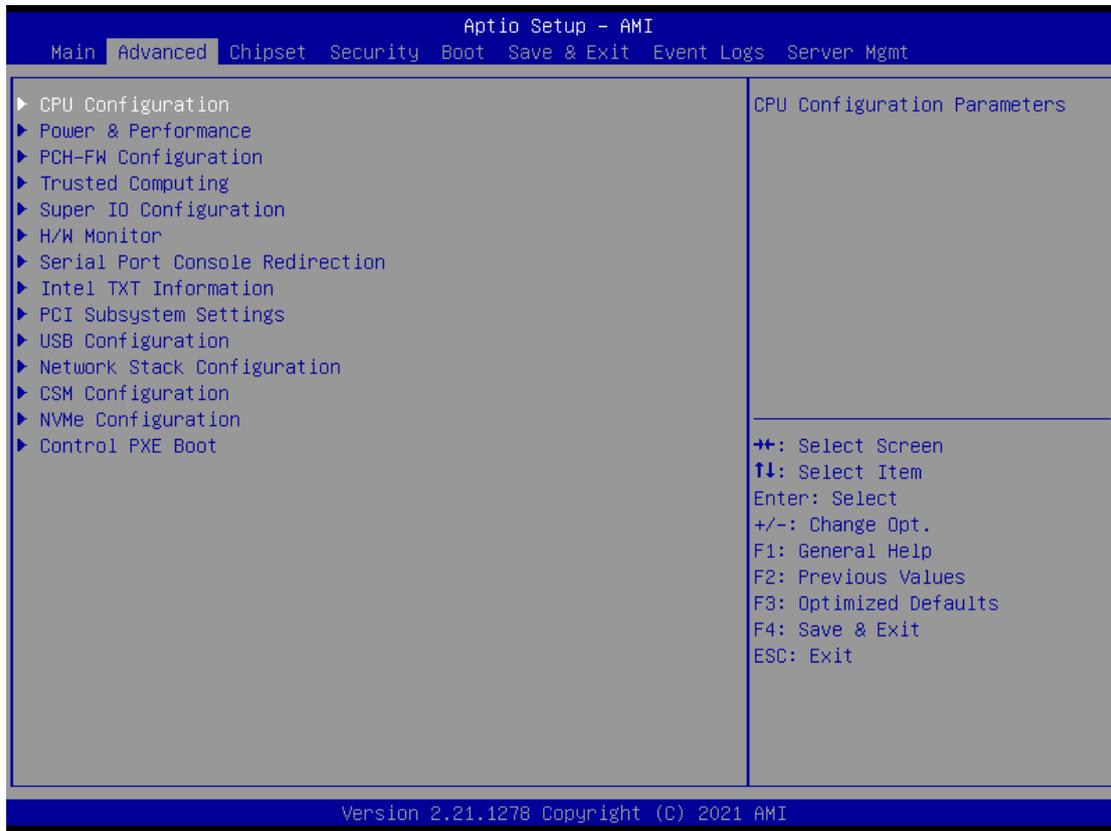


## CPU Configuration

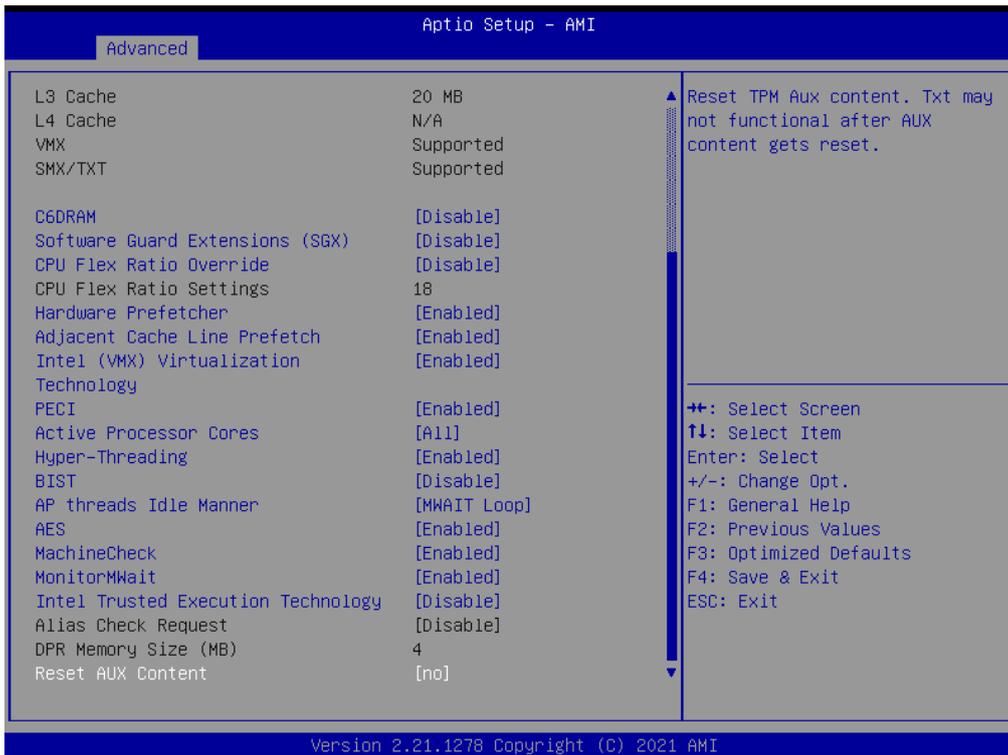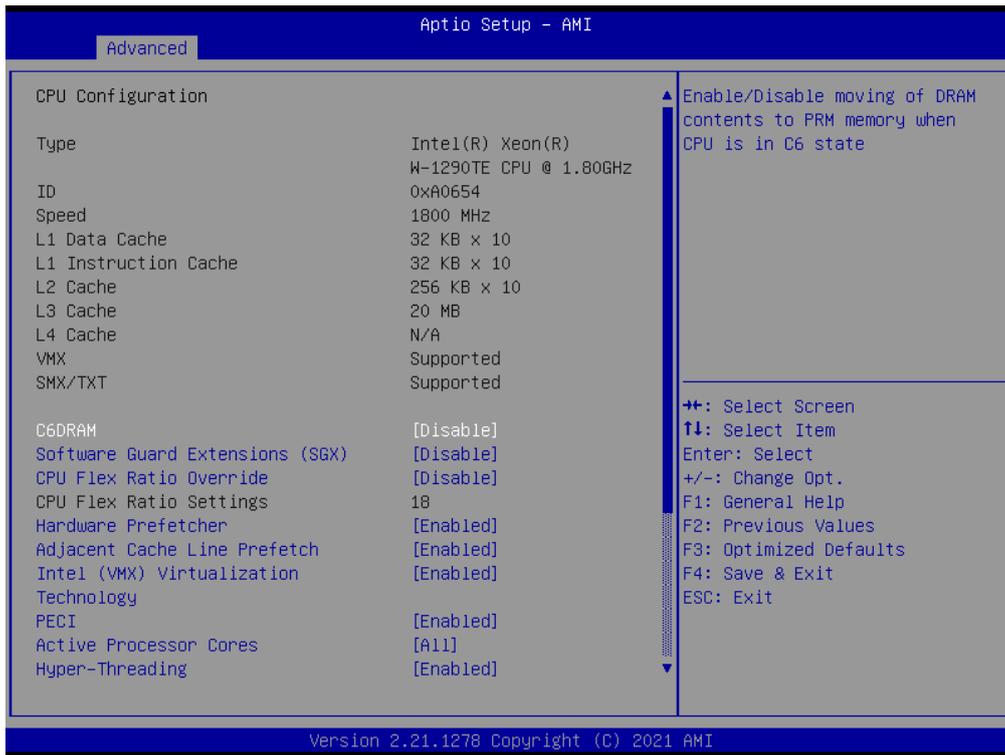

Feature	Options	Description
C6DRAM	Disabled Enabled	Enable/Disable moving of DRAM contents to PRM memory when CPU is in C6 state
Software Guard Extensions (SGX)	Disabled Enabled	Enable/Disable Software Guard Extensions (SGX)


CPU Flex Ratio Override	Disabled Enabled	Enable/Disable CPU Flex Ratio Programming
CPU Flex Ratio Settings	18	This value must be between Max Efficiency Ratio (LFM) and Maximum non-turbo ratio set by Hardware (HFM).
Hardware Prefetcher	Disabled Enabled	To turn on/off the MLC streamer prefetcher.
Adjacent Cache Line Prefetch	Disabled Enabled	To turn on/off prefetching of adjacent cache lines.
Intel® (VMX) Virtualization Technology	Disabled Enabled	When enabled, a VMM can utilize the additional hardware capabilities provided by Vanderpool Technology.
PECI	Disabled Enabled	PECI
Active Processor Cores	All 1 2 3 4 5 6 7 8 9	Number of cores to enable in each processor package.
Hyper-Threading	Disabled Enabled	Enabled for Windows XP and Linux (OS optimized for Hyper-Threading Technology) and Disabled for other OS (OS not optimized for Hyper-Threading Technology).
BIST	Disabled Enabled	Enable/Disable BIST (Built-In Self Test) on reset
AP threads Idle Manner	HALT Loop MWAIT Loop RUN Loop	AP threads Idle Manner for waiting signal to run
AES	Disabled Enabled	Enable/Disable AES (Advanced Encryption Standard)
MachineCheck	Disabled Enabled	Enable/Disable Machine Check
MonitorMWait	Disabled Enabled	Enable/Disable MonitorMWait
Intel® Trusted Execution Technology	Disabled Enabled	Enables utilization of additional hardware capabilities provided by Intel® Trusted Execution Technology. Changes require a full power cycle to take effect.

## Power & Performance

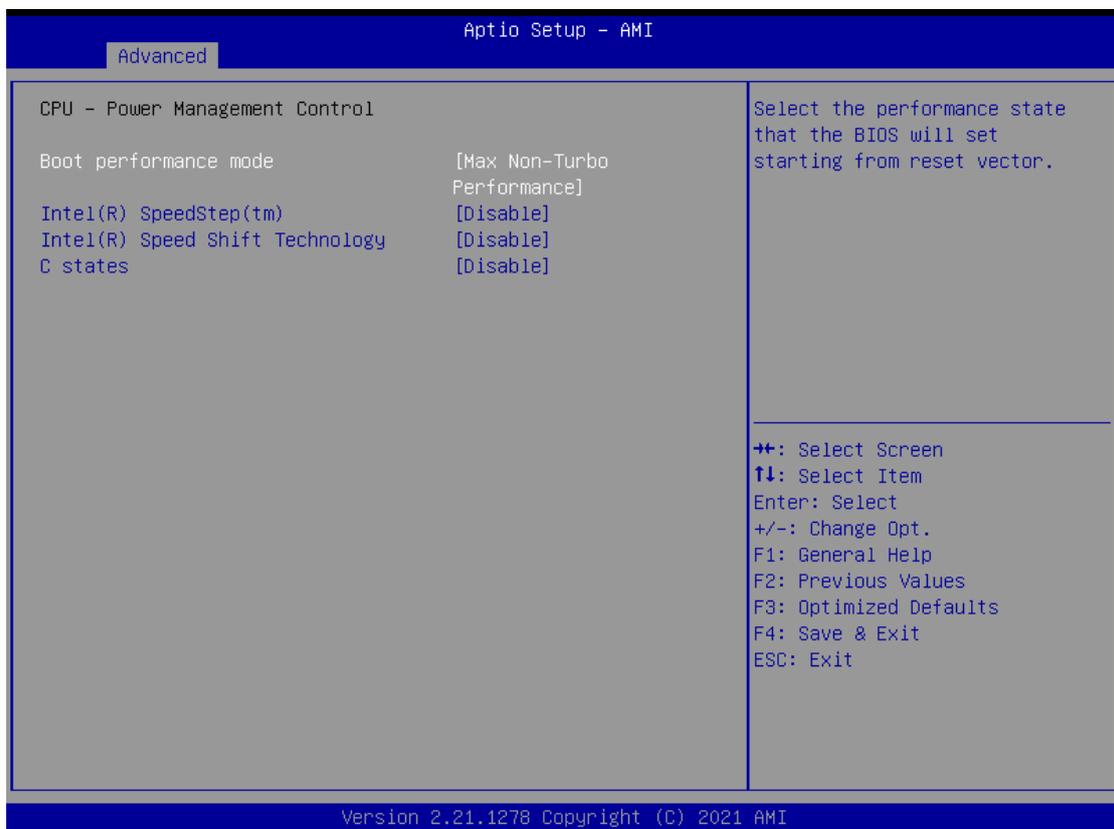


Feature	Options	Description
Boot performance mode	Max Battery Max Non-Turbo Performance Turbo Performance"	Select the performance state that the BIOS will set starting from reset vector.
Intel® SpeedStep™	Disabled Enabled	Allows more than two frequency ranges to be supported.
Intel® Speed Shift Technology	Disabled Enabled	Enable/Disable Intel® Speed Shift Technology support. Enabling will expose the CPPC v2 interface to allow for hardware-controlled P-states.
C States	Disabled Enabled	Enable/Disable CPU Power Management. Allows CPU to go to C states when it's not 100% utilized.

## PCH-FW Configuration

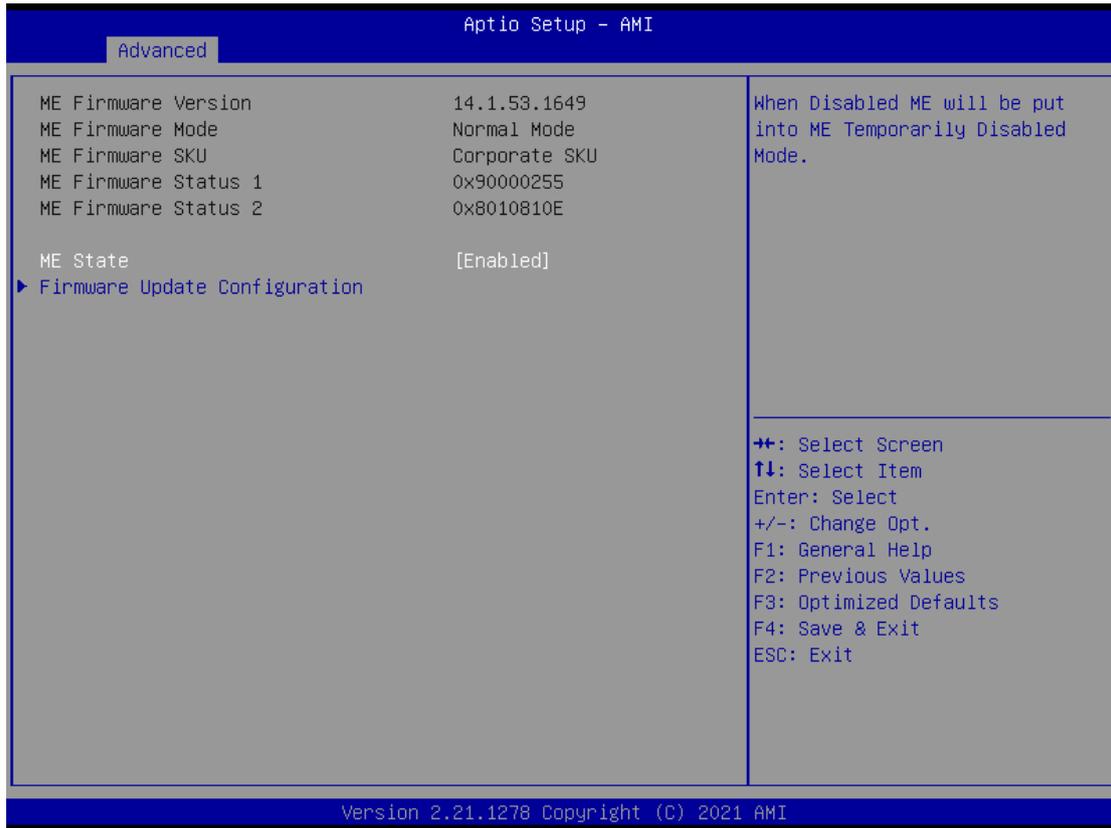

Feature	Options	Description
ME State	Disabled Enabled	When Disabled ME will be put into ME Temporarily Disabled Mode.

PCH-FW Configuration

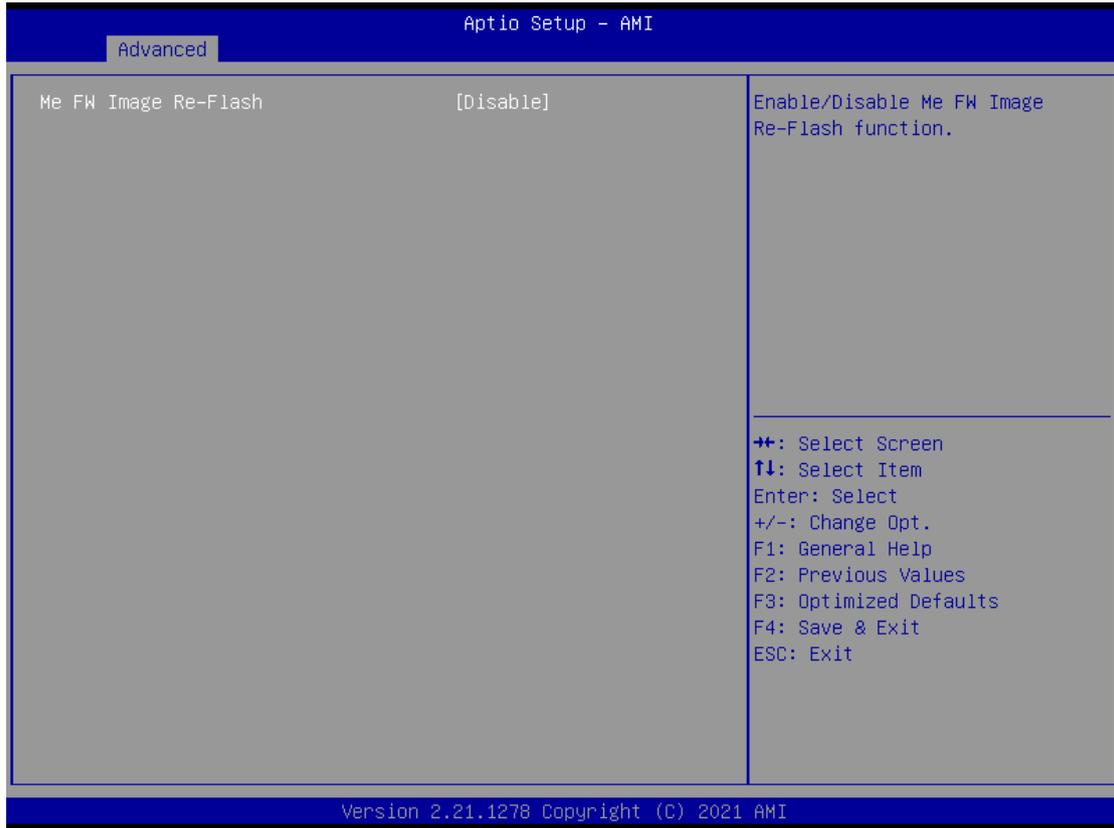


Feature	Options	Description
Me FW Image Re-Flash	Disabled Enabled	Enable/Disable Me FW Image Re-Flash function.

## Trusted Computing





Feature	Options	Description
Security Device Support	Enabled Disabled	Enables or disables BIOS support for security device. By disabling this function, OS will not show Security Device. TCG EFI protocol and INT1A interface will not be available.

Trusted Computing (TPM 1.2)

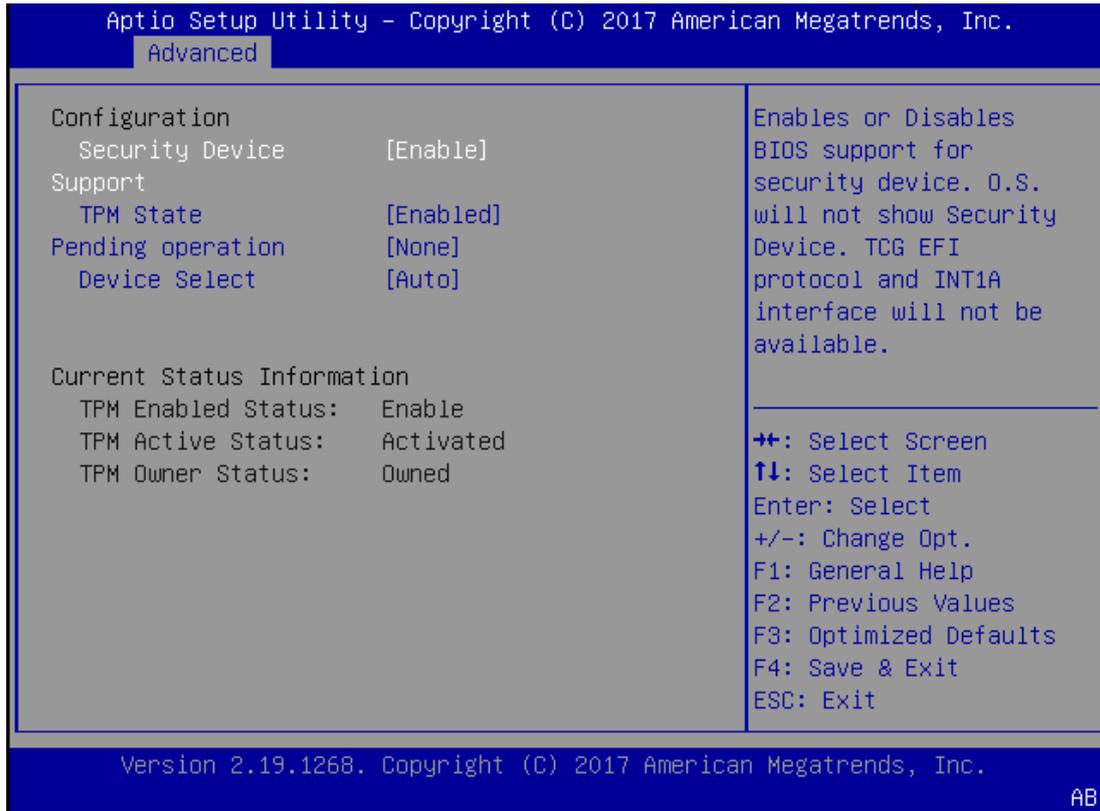

Feature	Options	Description
Security Device Support	Enabled Disabled	Enables or disables BIOS support for security device. By disabling this function, OS will not show Security Device. TCG EFI protocol and INT1A interface will not be available.
TPM State	Enabled Disabled	Enables or disables Security Device. <b>NOTE:</b> Your computer will reboot during restart in order to change State of the Device.
Pending operation	None TPM Clear	Schedules an Operation for the Security Device. <b>NOTE:</b> Your computer will reboot during restart in order to change State of Security Device.
Device Select	TPM 1.2 TPM 2.0 Auto	<b>TPM 1.2</b> will restrict support to TPM 1.2 devices; while <b>TPM 2.0</b> will restrict support to TPM 2.0 devices; <b>Auto</b> will support both with the default set to TPM 2.0 devices. If not found, TPM 1.2 devices will be enumerated.


Trusted Computing (TPM 2.0)

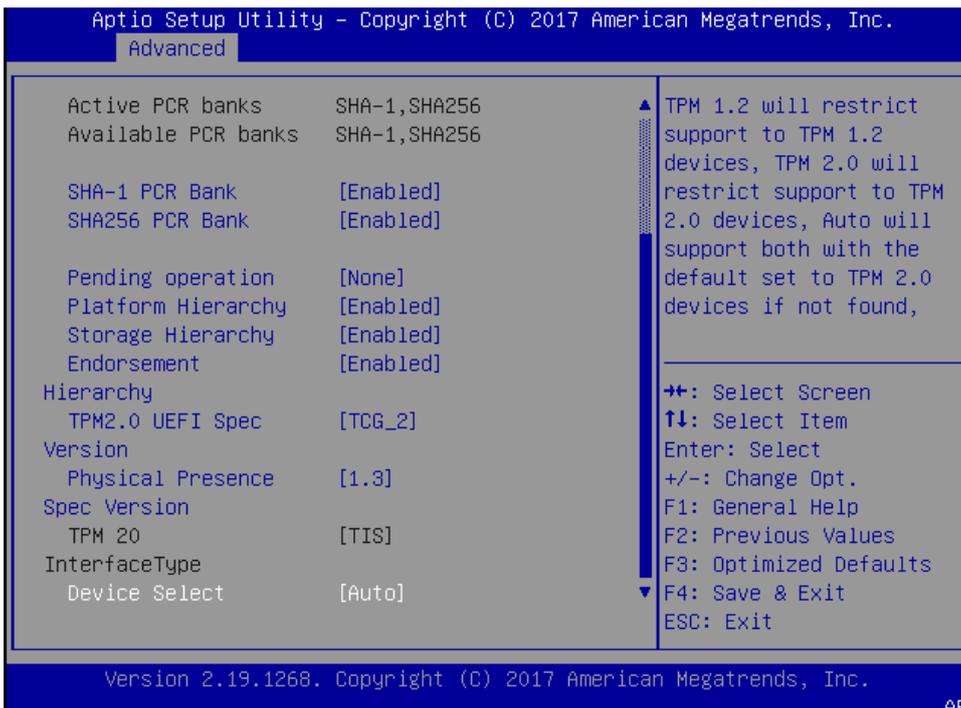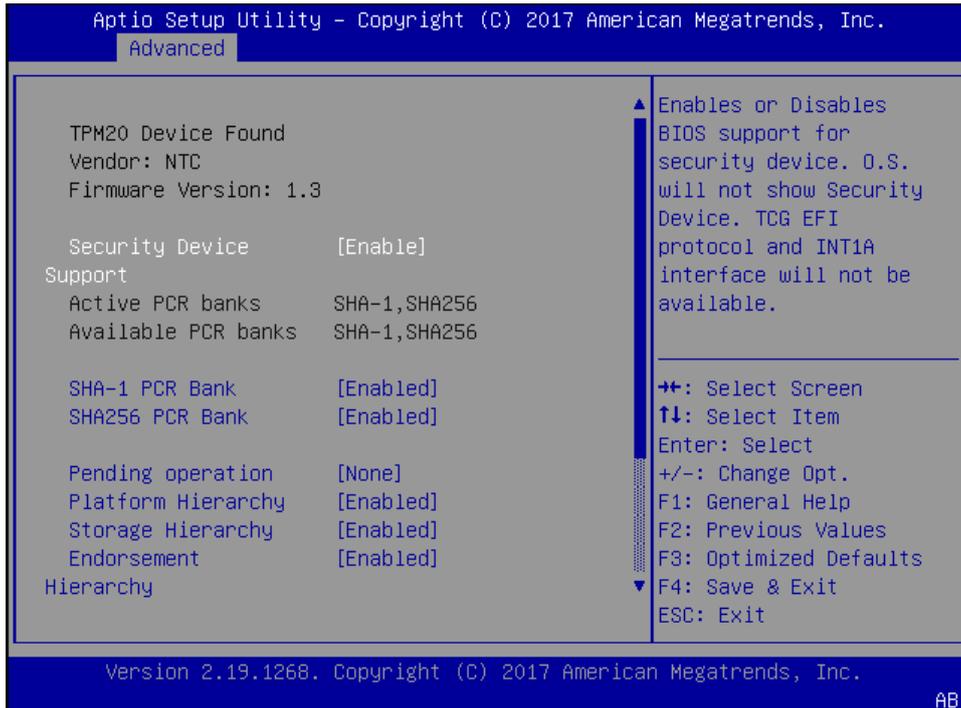


Feature	Options	Description
Security Device Support	Enabled Disabled	Enables or disables BIOS support for security device. By disabling this function, OS will not show Security Device. TCG EFI protocol and INT1A interface will not be available.
SHA-1 PCR Bank	Enabled Disabled	Enables or disables SHA-1 PCR Bank.
SHA256 PCR Bank	Enabled Disabled	Enables or disables SHA256 PCR Bank.

Pending operation	None TPM Clear	Schedules an Operation for the Security Device. <b>NOTE:</b> Your computer will reboot during restart in order to change State of Security Device.
Platform Hierarchy	Enabled Disabled	Enables or disables Platform Hierarchy.
Storage Hierarchy	Enabled Disabled	Enables or disables Storage Hierarchy.
Endorsement Hierarchy	Enabled Disabled	Enables or disables Endorsement Hierarchy.
TPM2.0 UEFI Spec Version	TCG_1_2 TCG_2	Select the TCG2 Spec Version, <b>TCG_1_2:</b> Supports the Compatible mode for Win8/Win10 <b>TCG_2:</b> Supports new TCG2 protocol and event format for Win10 or later.
Physical Presence Spec Version	1.2 1.3	Select to tell OS to support PPI Spec Version 1.2 or 1.3. <b>NOTE:</b> Some HCK tests might not support 1.3.
TPM 20 Interface Type	TIS	Select <b>TPM 20 Device</b> for the Communication Interface.
Device Select	TPM 1.2 TPM 2.0 Auto	<b>TPM 1.2</b> will restrict support to TPM 1.2 devices; while <b>TPM 2.0</b> will restrict support to TPM 2.0 devices; <b>Auto</b> will support both with the default set to TPM 2.0 devices. If not found, TPM 1.2 devices will be enumerated.

## Super IO Configuration

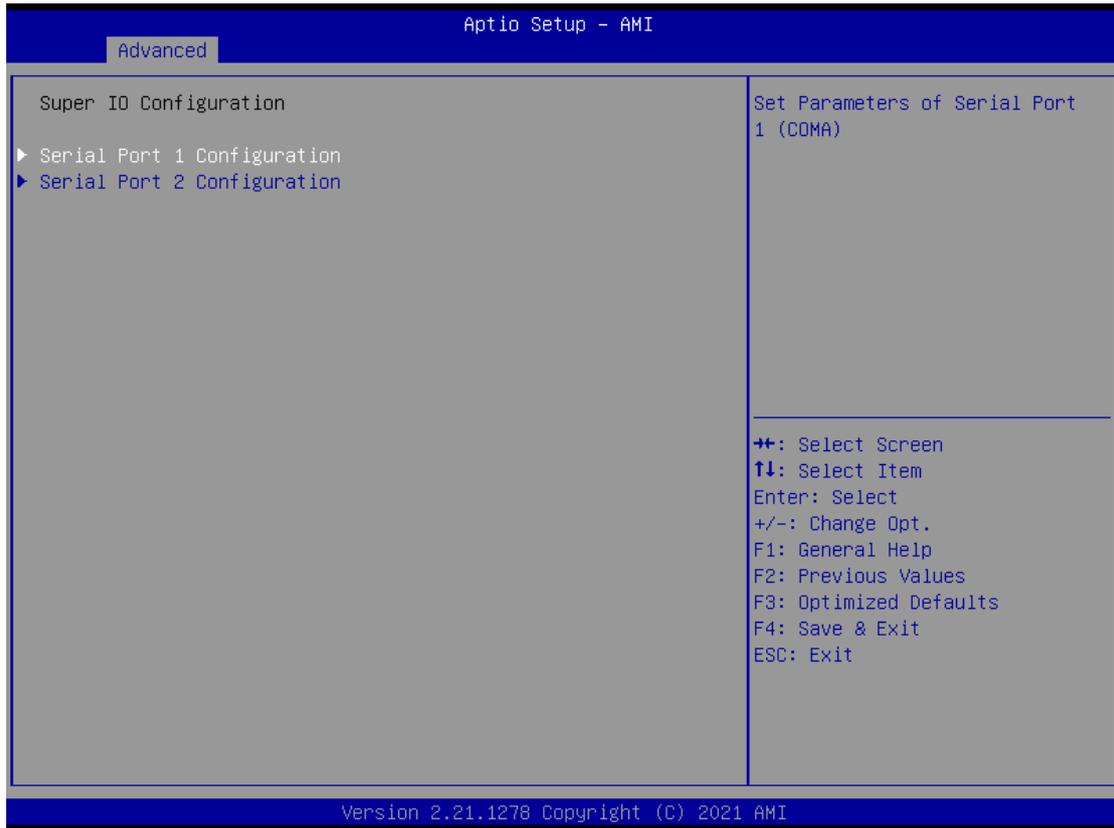


## Serial Port 1 Configuration

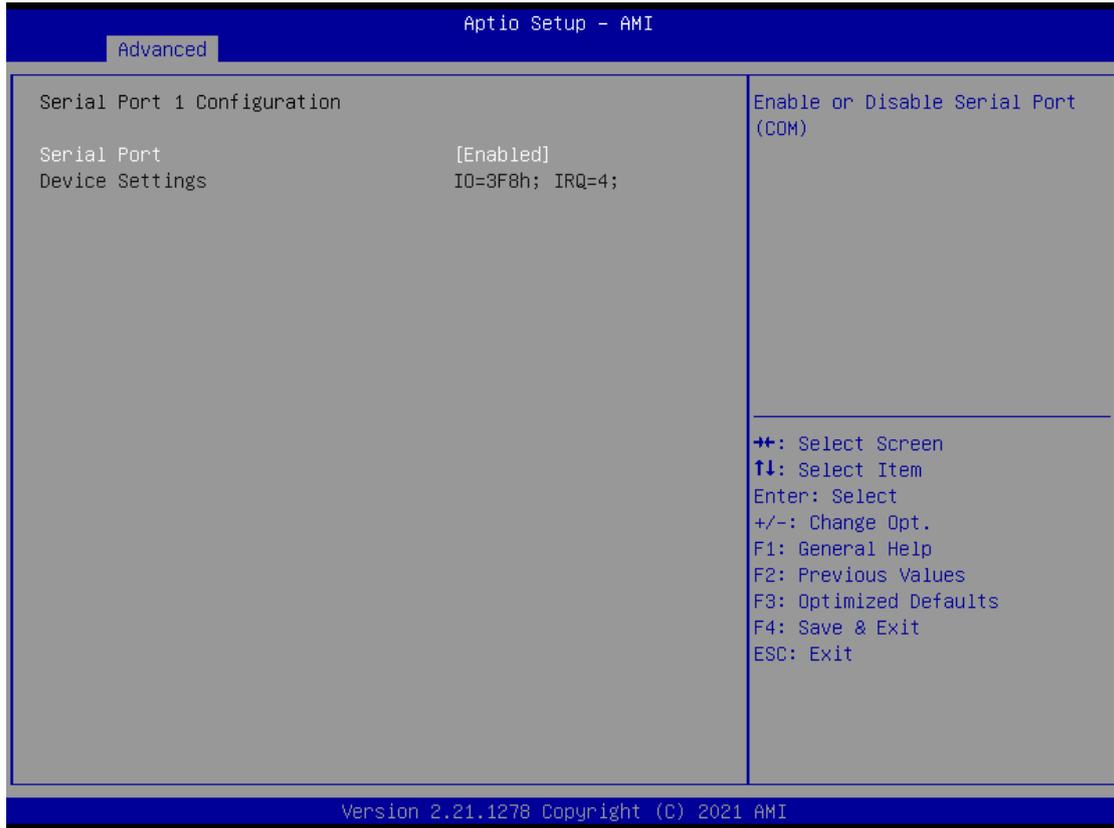


Feature	Options	Description
Serial Port	Enabled Disabled	Enables or disables Serial Port 1.
Device Settings	NA	IO=3F8h; IRQ = 4

## Serial Port 2 Configuration

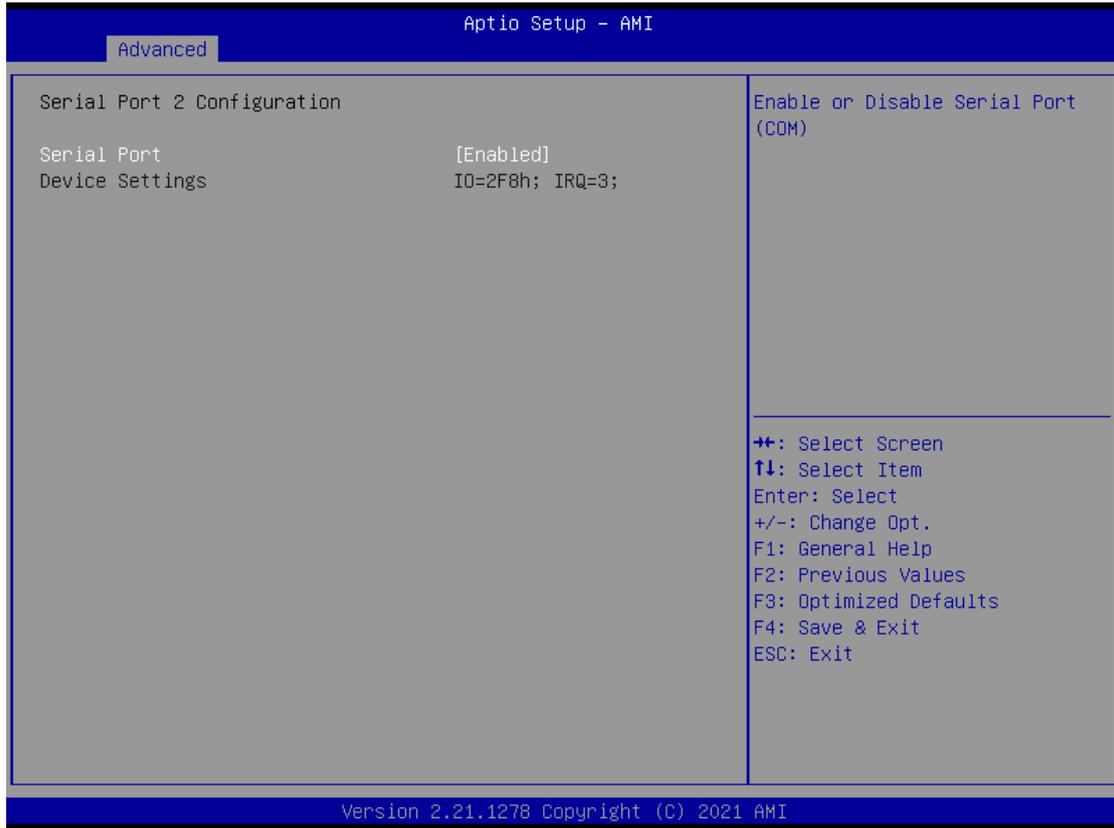


Feature	Options	Description
Serial Port	Enabled Disabled	Enables or disables Serial Port 2.
Device Settings	NA	IO=2F8h; IRQ = 3

## H/W Monitor

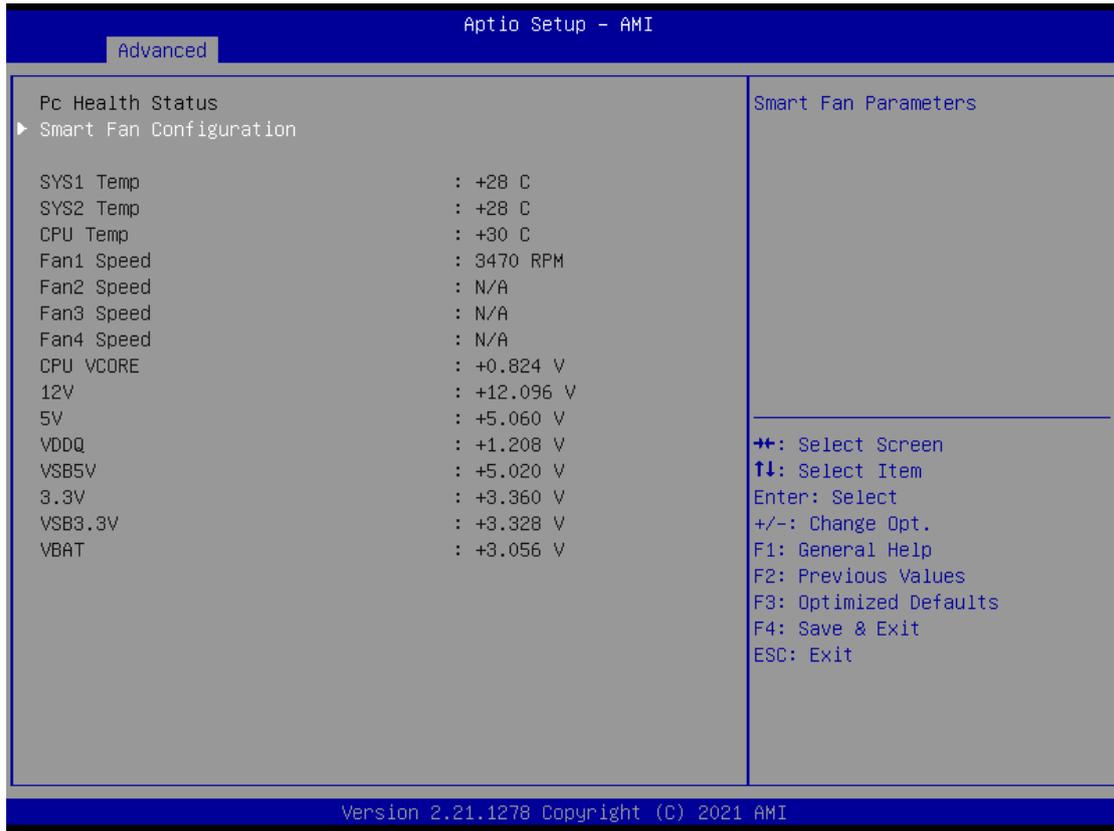


Feature	Options	Description
Smart Fan Control	None	Smart Fan Parameters

Smart Fan Control

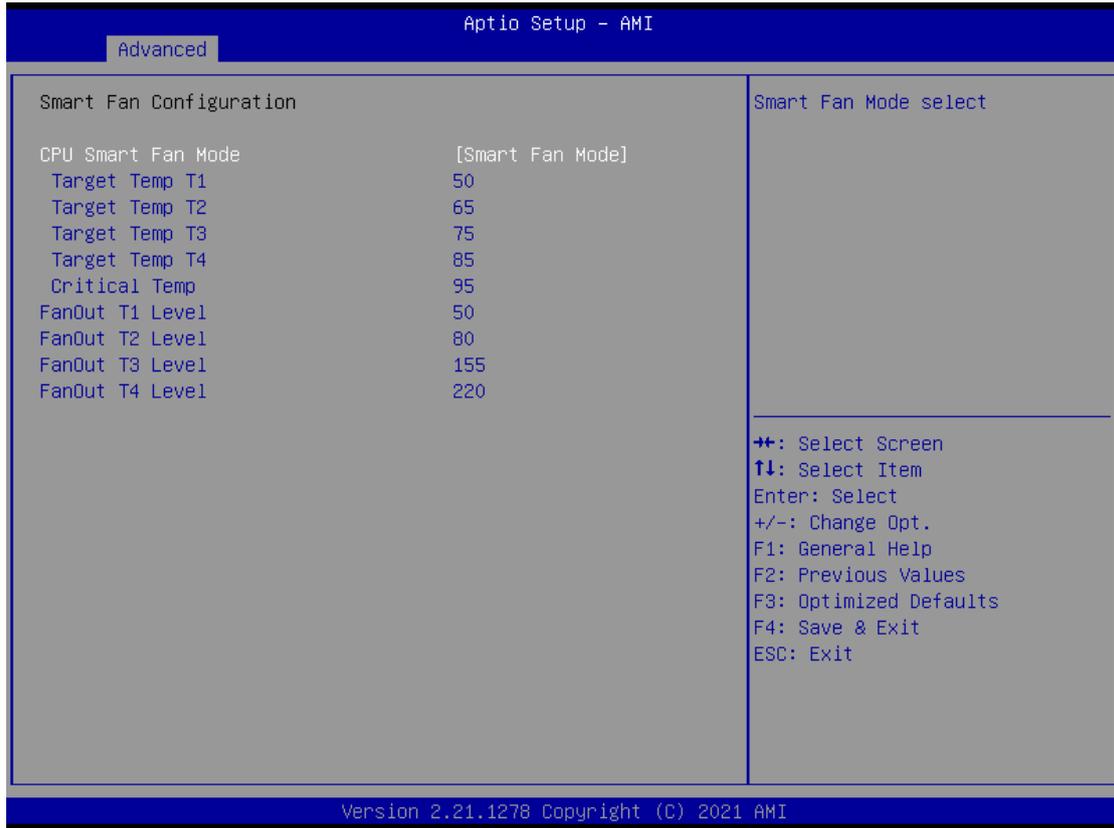


Feature	Options	Description
CPU Smart Fan Mode	Manual Mode <b>Smart Fan Mode</b>	Smart Fan Mode select
Target Temp T1	<b>50</b>	Input Target Temperature (Range:0 - 127)
Target Temp T2	<b>65</b>	Input Target Temperature (Range:0 - 127)
Target Temp T3	<b>75</b>	Input Target Temperature (Range:0 - 127)
Target Temp T4	<b>85</b>	Input Target Temperature (Range:0 - 127)
Critical Temp	<b>95</b>	Input Target Temperature (Range:0 - 127)
FanOut T1 Level	<b>50</b>	Input Target Fan Out
FanOut T2 Level	<b>80</b>	Input Target Fan Out
FanOut T3 Level	<b>155</b>	Input Target Fan Out
FanOut T4 Level	<b>220</b>	Input Target Fan Out

## Serial Port Console Redirection

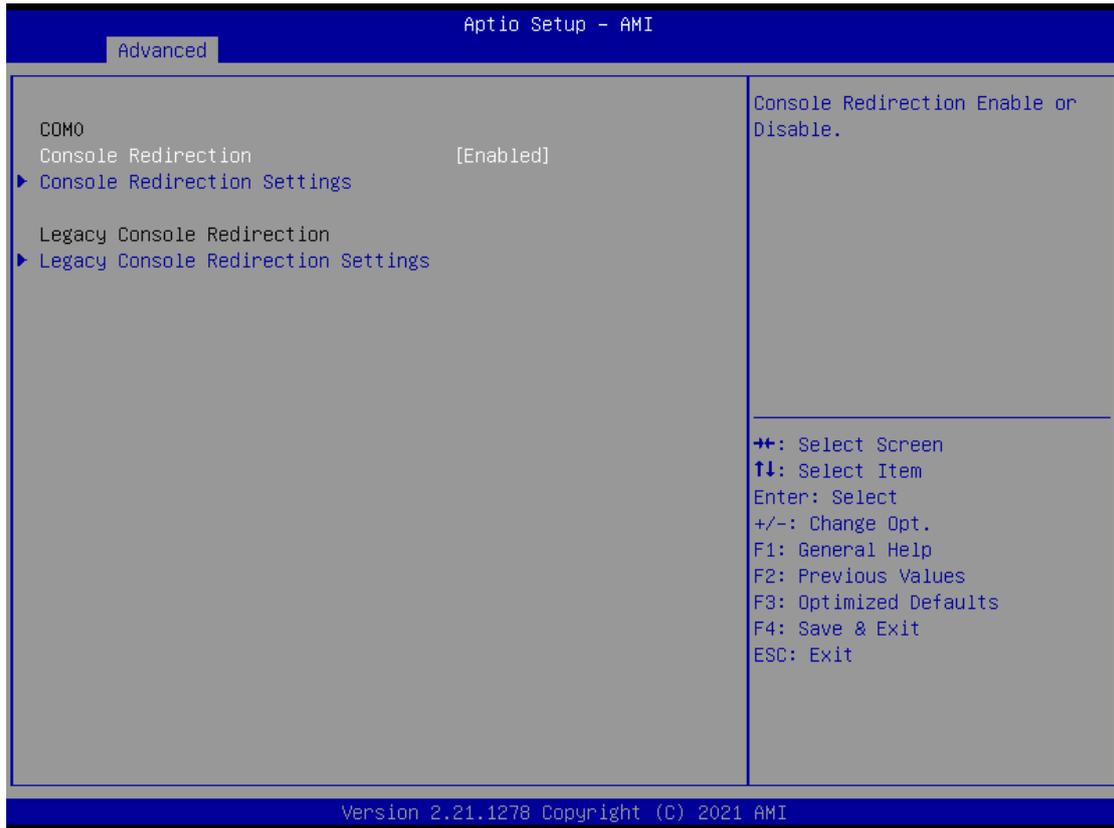

Feature	Options	Description
COM0 Console Redirection	Enabled Disabled	Enables or disables Console Redirection


Console Redirection Settings

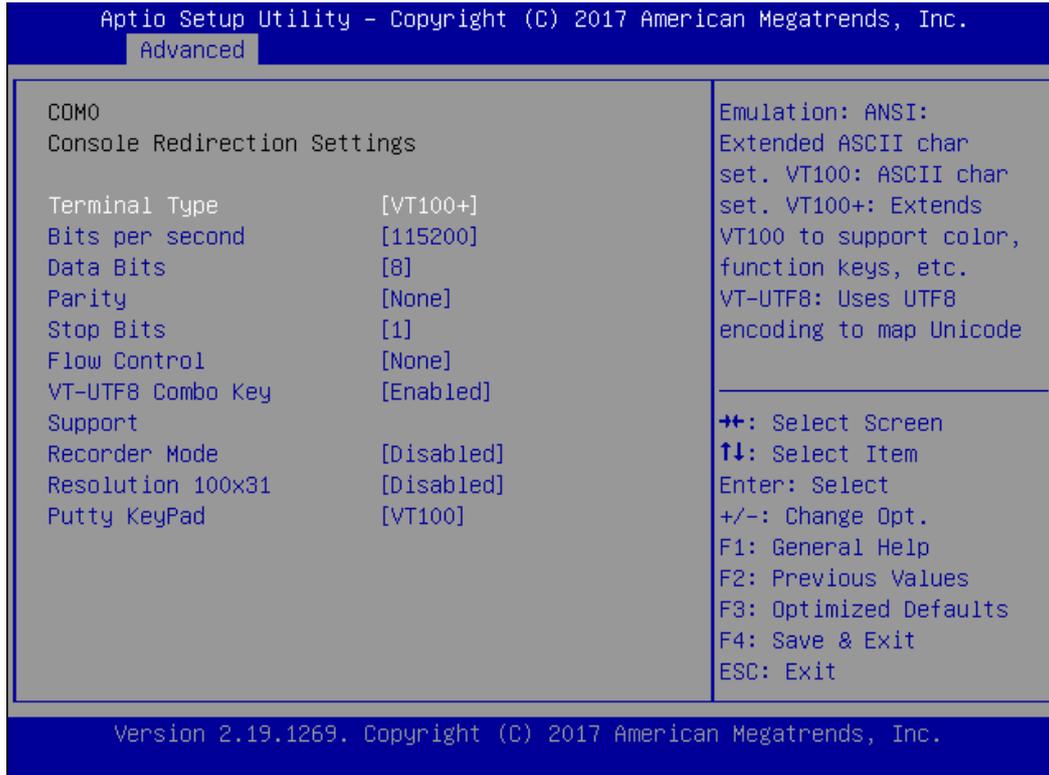

Feature	Options	Description
Terminal Type	VT100 VT100+ VT-UTF8 ANSI	<b>VT100:</b> ASCII char set <b>VT100+:</b> Extends VT100 to support color, function keys, etc. <b>VT-UTF8:</b> Uses UTF8 encoding to map Unicode chars onto 1 or more bytes <b>ANSI:</b> Extended ASCII char set
Bits per second	9600 19200 38400 57600 115200	Selects serial port transmission speed. The speed must be matched on the other side. Long or noisy lines may require lower speeds.
Data Bits	7 8	Data Bits
Parity	None Even Odd Mark Space	A parity bit can be sent with the data bits to detect some transmission errors.
Stop Bits	1 2	Indicates the end of a serial data packet.
Flow Control	None Hardware RTS/CTS	Flow Control can prevent data loss from buffer overflow.


VT-UTF8 Combo Key Support	Disabled Enabled	Enables VT-UTF8 Combination Key Support for ANSI/VT100 terminals
Recorder Mode	Disabled Enabled	With this mode enabled, only text will be sent. This is to capture Terminal data.
Resolution 100x31	Disabled Enabled	Enables or disables extended terminal resolution
Putty KeyPad	VT100 LINUX XTERM86 SCO ESCN VT400	Selects FunctionKey and KeyPadon Putty.

Console Redirection Settings

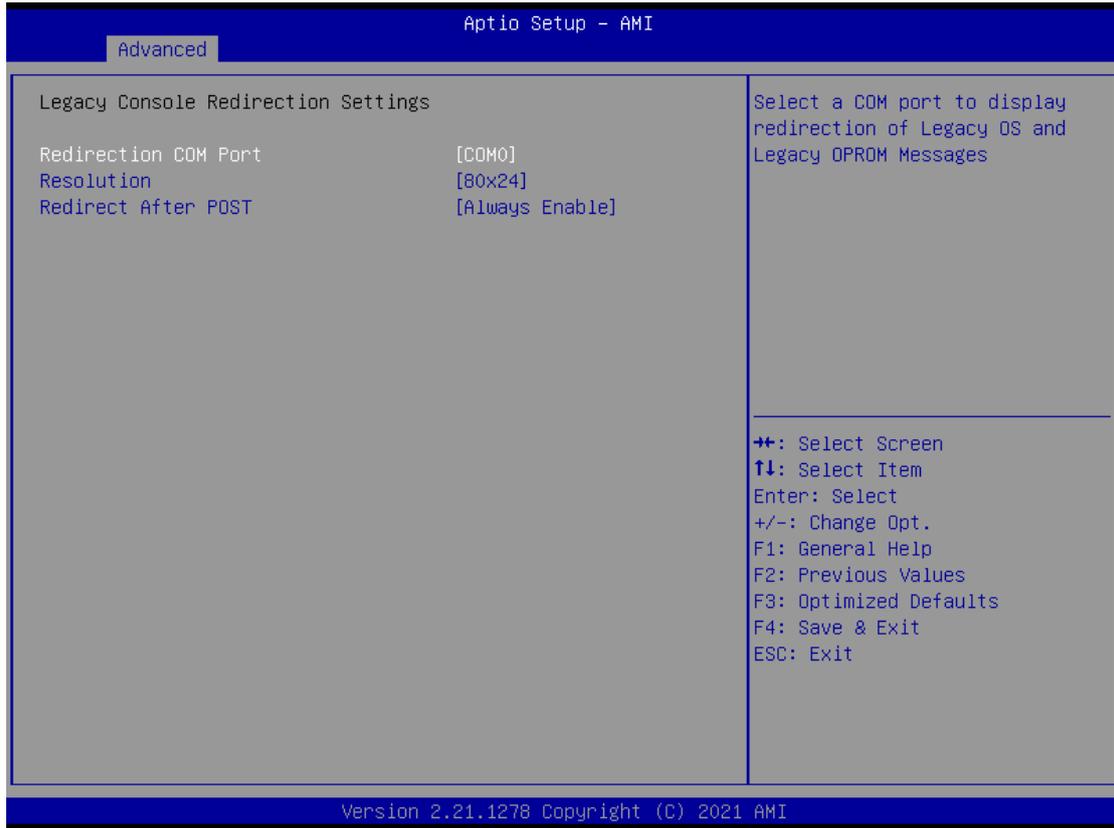

Feature	Options	Description
Redirection COM Port	COM0	Select a COM port to display redirection of Legacy OS and Legacy OPRM Messages.
Resolution	80x24 80x25	On Legacy OS, the Number of Rows and Columns supported redirection.
Redirection After BIOS POST	Always Enable BootLoader	When <b>Bootloader</b> is selected, Legacy Console Redirection is disabled before booting to legacy OS. When <b>Always Enable</b> is selected, then Legacy Console Redirection is enabled for legacy OS. Default setting for this option is set to <b>Always Enable</b> .

## Intel® TXT Information

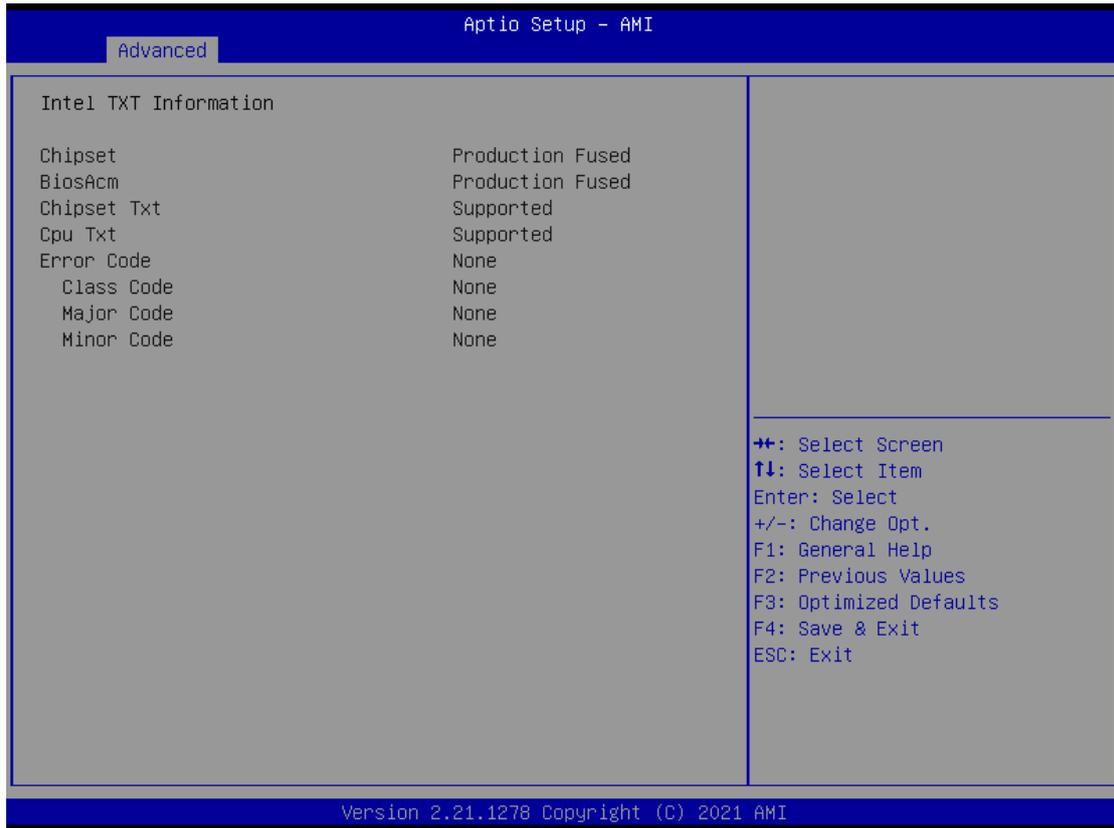


## PCI Subsystem Settings




Feature	Options	Description
Above 4G Decoding	Disabled Enabled	Globally Enables or Disables 64bit capable Devices to be Decoded in Above 4G Address Space (Only if System Supports 64 bit PCI Decoding).

## USB Configuration

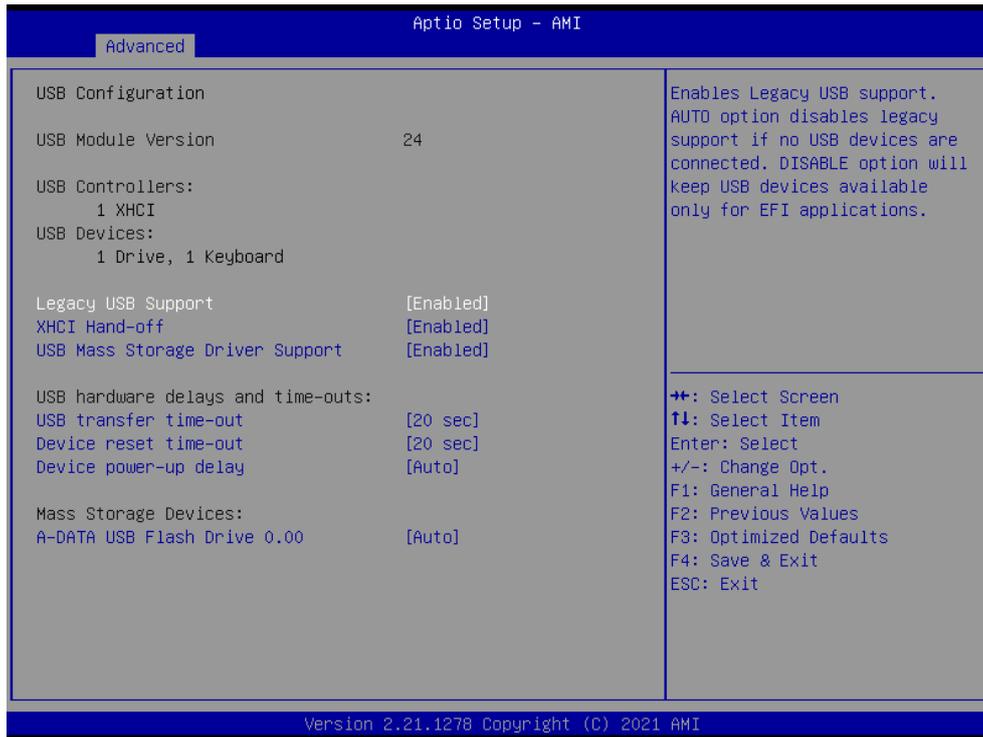


Feature	Options	Description
Legacy USB Support	<p><b>Enabled</b></p> <p>Disabled</p> <p>Auto</p>	Enables Legacy USB support. <b>Auto</b> option disables legacy support if no USB devices are connected; <b>Disabled</b> option will keep USB devices available only for EFI applications.
XHCI Hand-off	<p><b>Enabled</b></p> <p>Disabled</p>	This is a workaround for Oses without XHCI hand-off support. The XHCI ownership change should be claimed by XHCI driver.
USB Mass Storage Driver Support	<p><b>Enabled</b></p> <p>Disabled</p>	Enables or disables USB Mass Storage Driver Support.
USB transfer time-out	<p>1 sec</p> <p>5 sec</p> <p>10 sec</p> <p><b>20 sec</b></p>	The time-out value for Control, Bulk, and Interrupt transfers.
Device reset time-out	<p>1 sec</p> <p>5 sec</p> <p>10 sec</p> <p><b>20 sec</b></p>	USB mass storage device Start Unit command time-out
Device power-up delay	<p><b>Auto</b></p> <p>Manual</p>	Maximum time the device will take before it properly reports itself to the Host Controller. <b>Auto</b> uses default value: for a Root port, it is 100 ms, for a Hub port the delay is taken from Hub descriptor.

## Network Stack Configuration

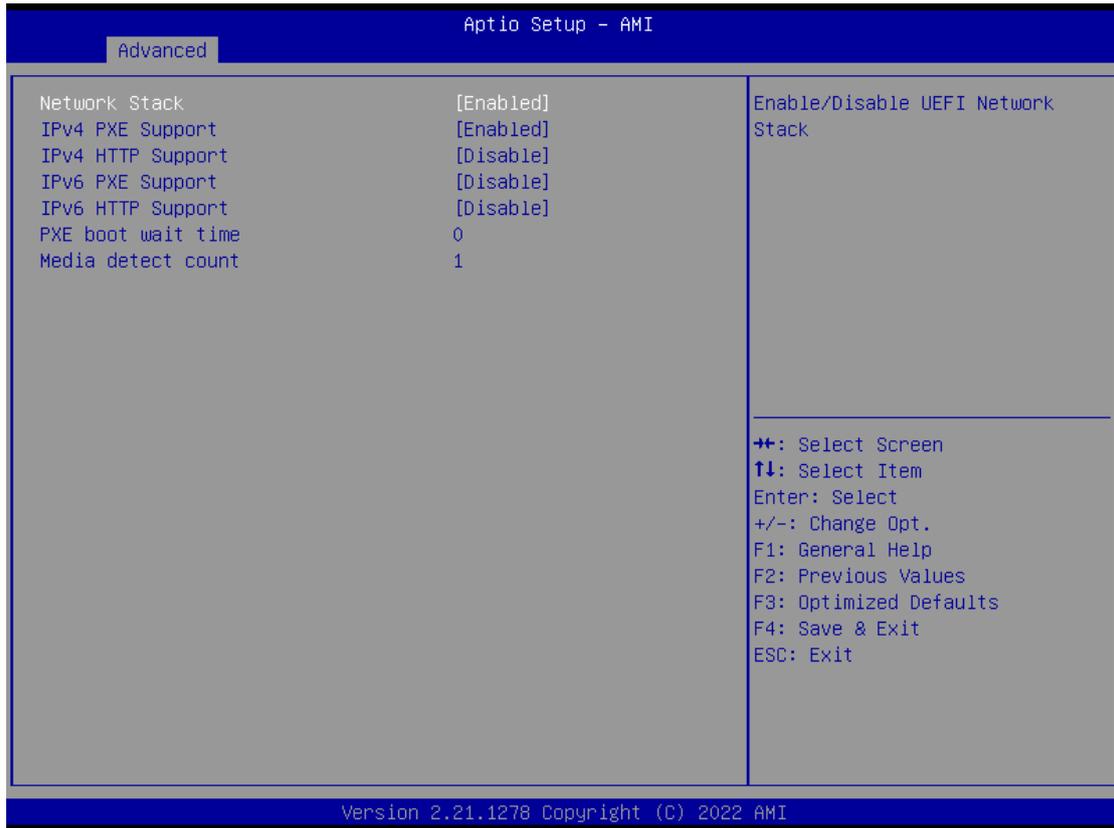


Feature	Options	Description
Network Stack	Disabled <b>Enabled</b>	Enables or disables UEFI Network Stack
IPv4 PXE Support	Disabled <b>Enabled</b>	Enable/Disable IPv4 PXE boot support. If disabled, IPv4 PXE boot support will not be available.
IPv4 HTTP Support	<b>Disabled</b> Enabled	Enable/Disable IPv4 HTTP boot support. If disabled, IPv4 HTTP boot support will not be available.
IPv6 PXE Support	<b>Disabled</b> Enabled	Enable/Disable IPv6 PXE boot support. If disabled, IPv6 PXE boot support will not be available.
IPv6 HTTP Support	<b>Disabled</b> Enabled	Enable/Disable IPv6 HTTP boot support. If disabled, IPv6 HTTP boot support will not be available.
PXE boot wait time	0	Wait time in seconds to press ESC key to abort the PXE boot. Use either +/- or numeric keys to set the value.
Media detect count	1	Number of times the presence of media will be checked. Use either +/- or numeric keys to set the value.

## CSM Configuration

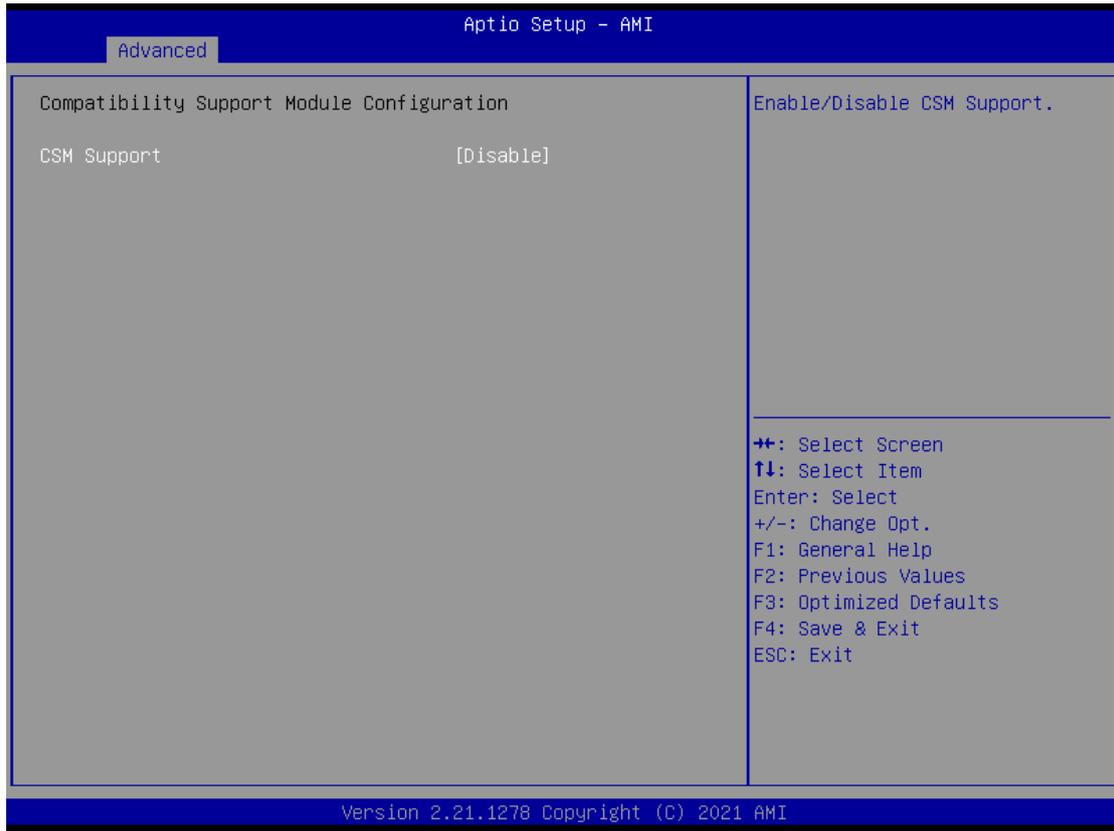

Feature	Options	Description
CSM Support	Disabled Enabled	Enables or disables CSM Support

## NVMe Configuration

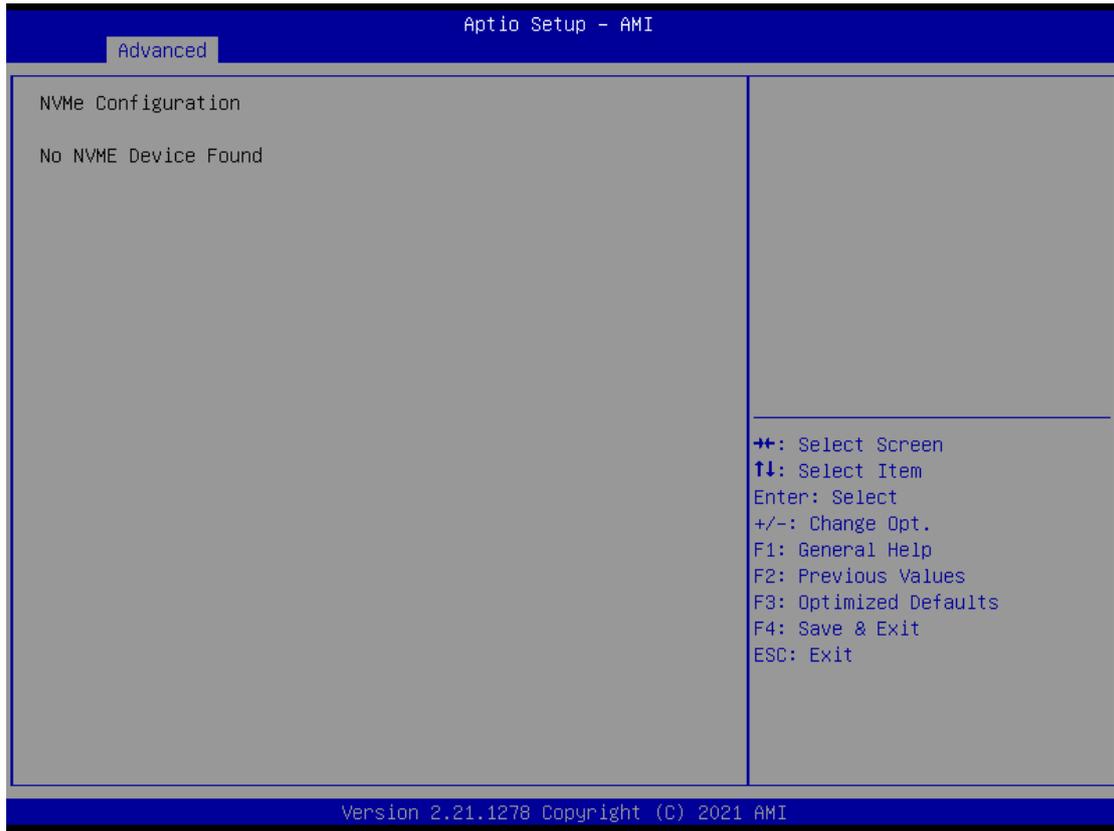


## Control PXE Boot




Feature	Options	Description
Control PXE Boot from	Disabled Enabled	Enable/Disable PXE function

## Chipset

Select the Chipset menu item from the BIOS setup screen to enter the Chipset setup screen. Users can select any of the items in the left frame of the screen.

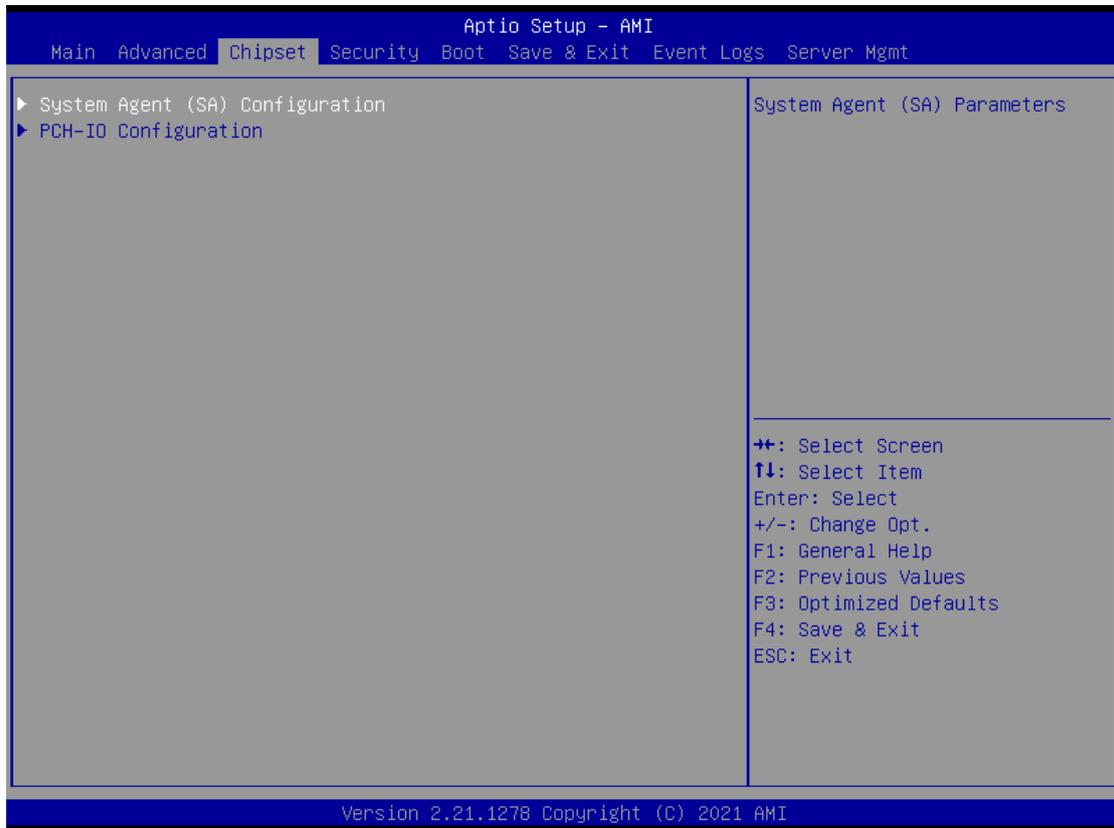


## System Agent (SA) Configuration

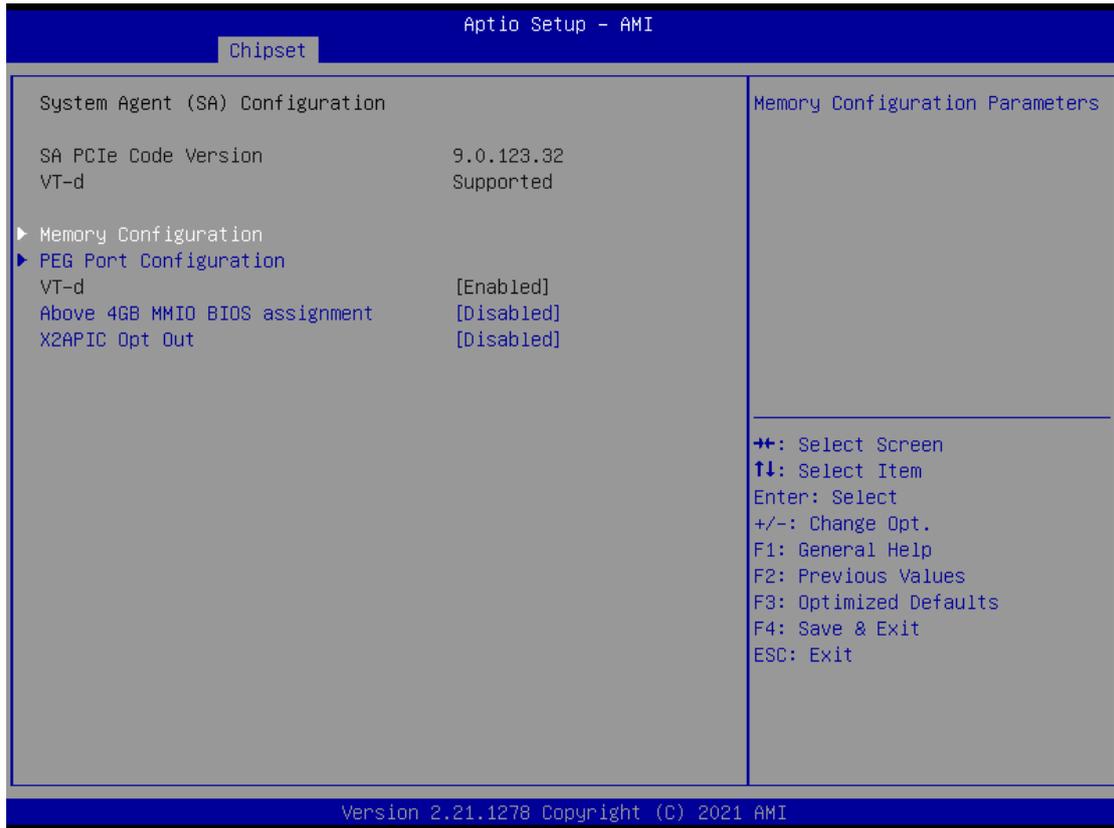


Feature	Options	Description
VT-d	Disabled Enabled	VT-d capability
Above 4GB MMIO BIOS assignment	Disabled Enabled	Enable/Disable above 4GB MemoryMappedIO BIOS assignment. This is enabled automatically when Aperture Size is set to 2048MB.
X2APIC Opt Out	Disabled Enabled	Enable/Disable X2APIC_OPT_OUT bit

## Memory Configuration

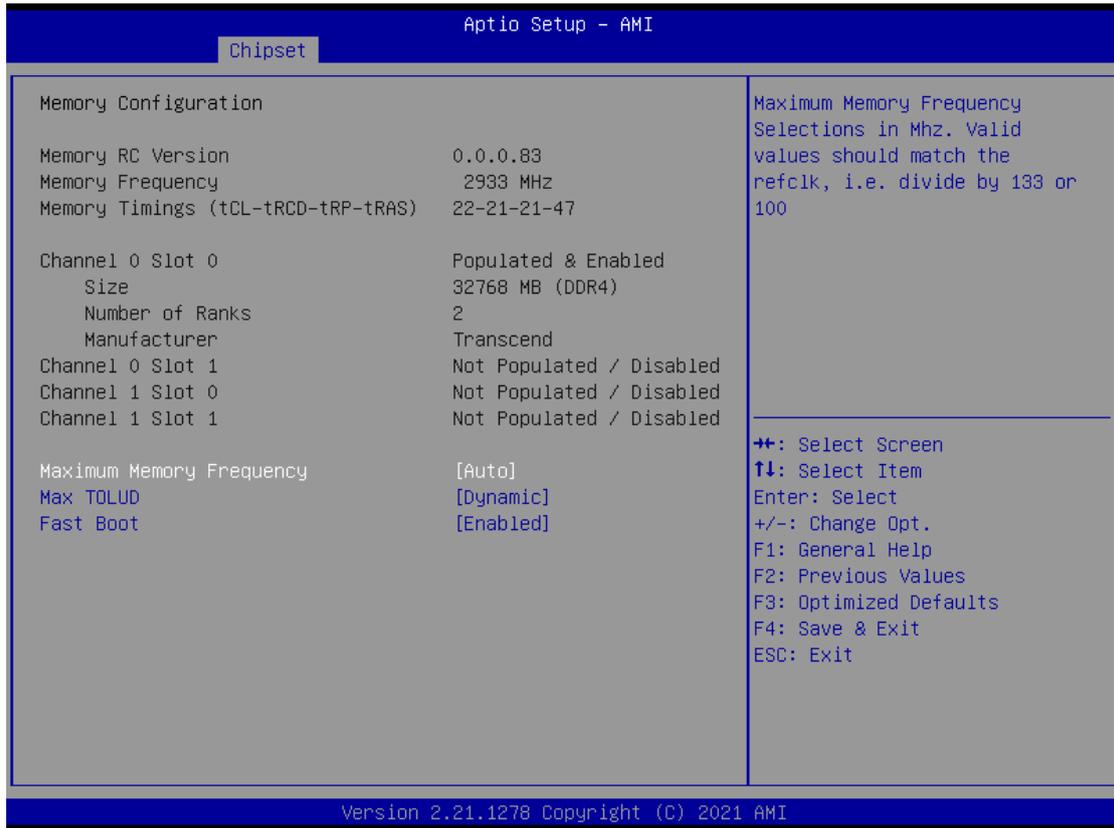


Feature	Options	Description
Maximum Memory Frequency	<b>Auto</b> 1067~ 3200	Maximum Memory Frequency Selections in Mhz. Valid values should match the refclk, i.e. divide by 133 or 100
Max TOLUD	<b>Dynamic</b> 1 GB ~ 3.5GB	Maximum Value of TOLUD. Dynamic assignment would adjust TOLUD automatically based on largest MMIO length of installed graphic controller
Fast Boot	Disabled <b>Enabled</b>	Enable/Disable fast path thru the MRC

## PEG Port Configuration

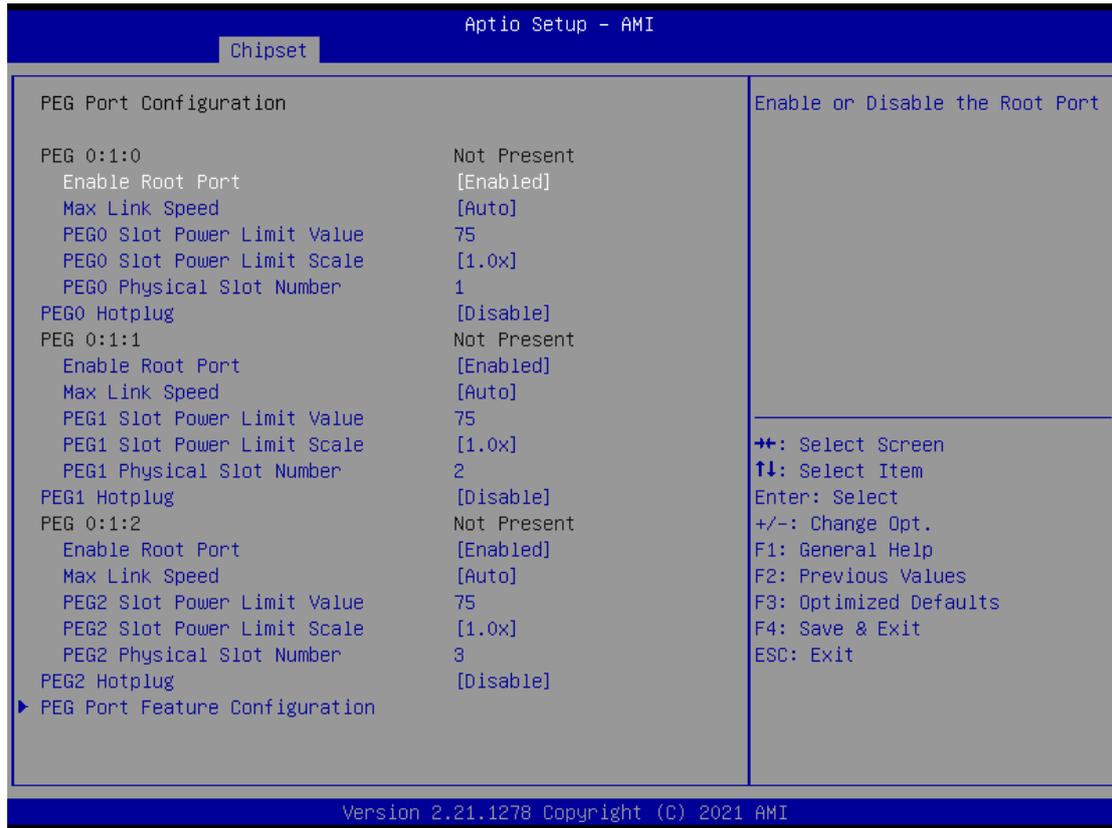

Feature	Options	Description
Enable Root Port	Disabled <b>Enabled</b> Auto	Enable or Disable the Root Port
Max Link Speed	<b>Auto</b> Gen1 Gen2 Gen3	Configure PEG 0:1:0 Max Speed
PEG0 Slot Power Limit Value	<b>75</b>	Sets the upper limit on power supplied by slot. Power limit (in Watts) is calculated by multiplying this value by the Slot Power Limit Scale. Values 0-255
PEG0 Slot Power Limit Scale	<b>1.0x</b> 0.1x 0.01x 0.001x	Select the scale used for the Slot Power Limit Value.
PEG0 Physical Slot Number	<b>1</b>	Set the physical slot number attached to this Port. The number has to be globally unique within the chassis. Values 0-8191
PEG0 Hotplug	<b>Disabled</b> Enabled	PCI Express Hot Plug Enable/Disable

PEG Port Feature Configuration

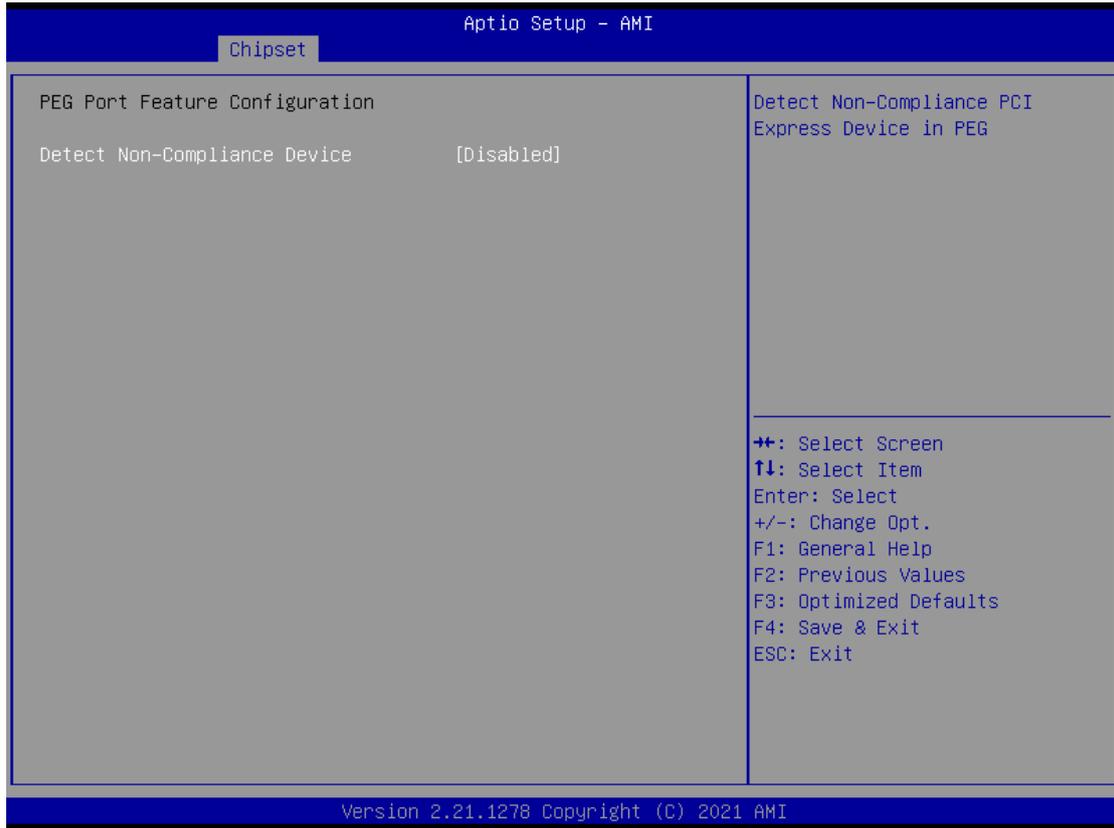



Feature	Options	Description
Detect Non-Compliance Device	Disabled Enabled	Detect Non-Compliance PCI Express Device in PEG

## PCH-IO Configuration





Feature	Options	Description
Serial IRQ Mode	Quiet <b>Continuous</b>	Configure Serial IRQ Mode.
Restore AC Power Loss	Power On Power Off <b>Last State</b>	Specify what state to go to when power is re-applied after a power failure (G3 state).

PCI Express Configuration

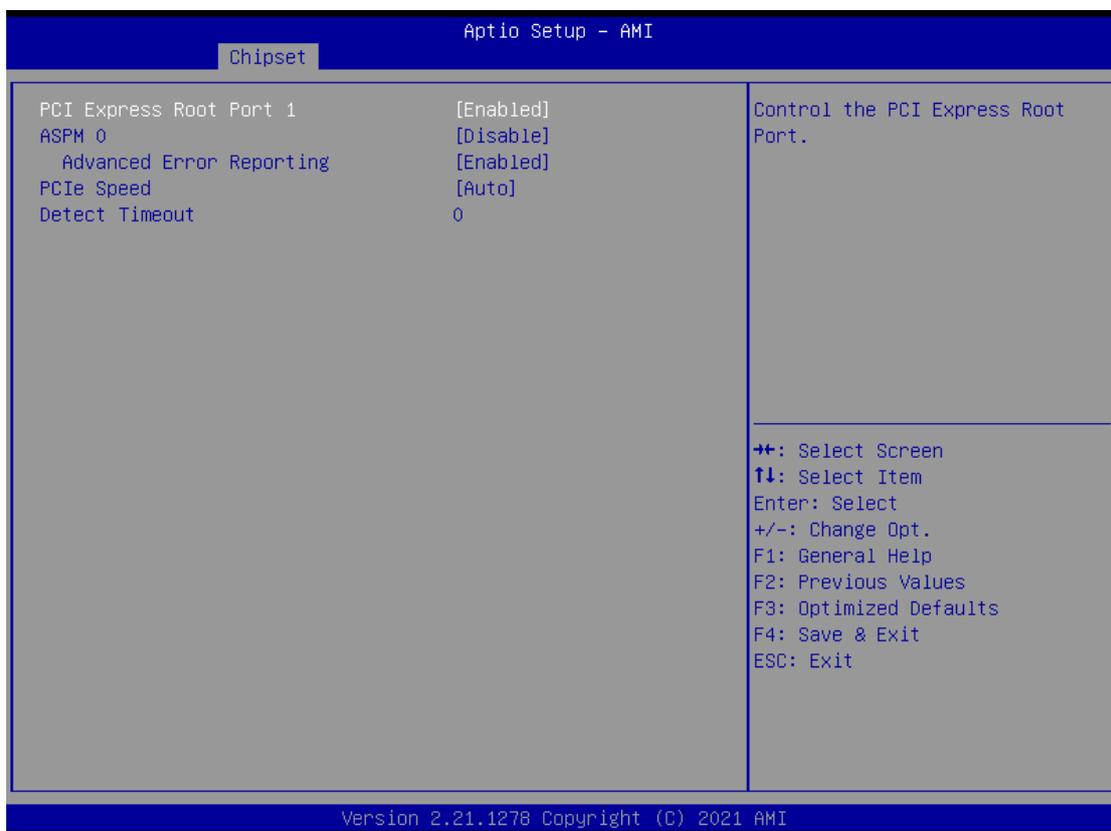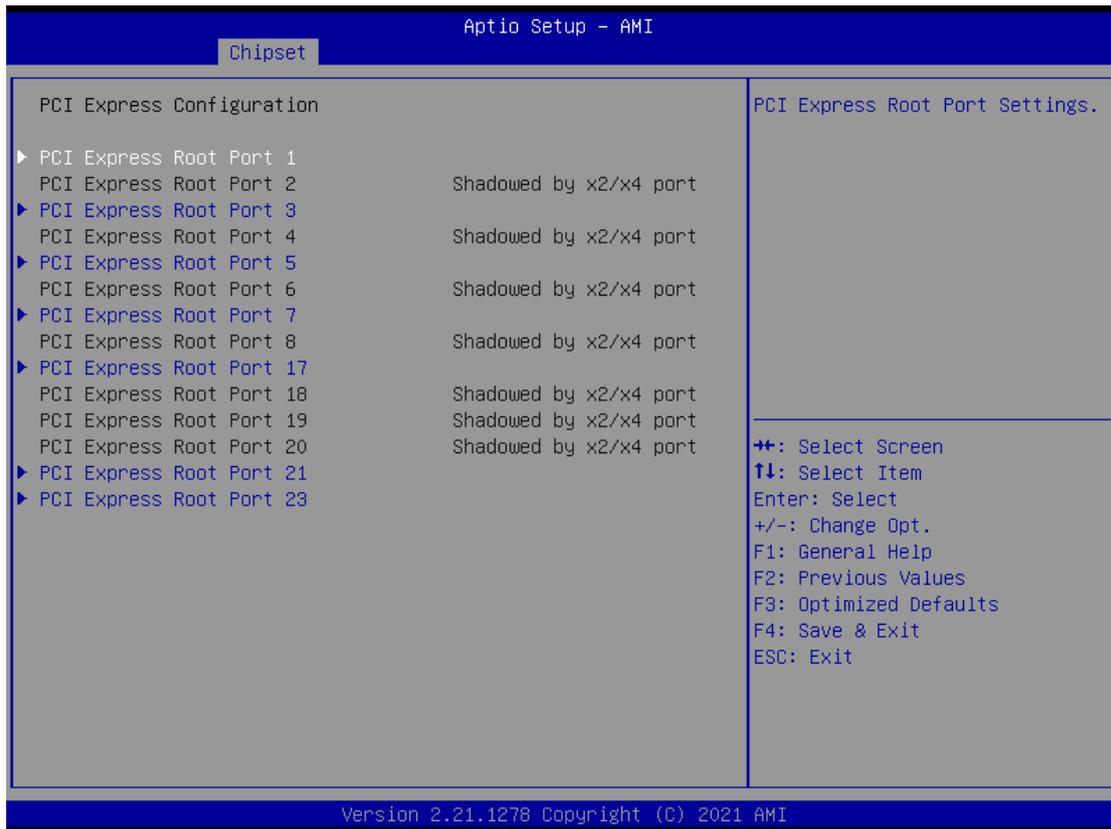


Feature	Options	Description
PCI Express Root Port 1	Disabled Enabled	Control the PCI Express Root Port.
ASPM 0	Disabled L0s L1 L0sL1 Auto	Set the ASPM Level:Force L0s - Force all links to L0s StateAUTO - BIOS auto configureDISABLE - Disables ASPM
Advanced Error Reporting	Disabled Enabled	Advanced Error Reporting Enable/Disable.
PCIe Speed	Auto Gen1 Gen2 Gen3	Configure PCIe Speed
Detect Timeout	0	The number of milliseconds reference code will wait for link to exit Detect state for enabled ports before assuming there is no device and potentially disabling the port.

SATA And RST Configuration

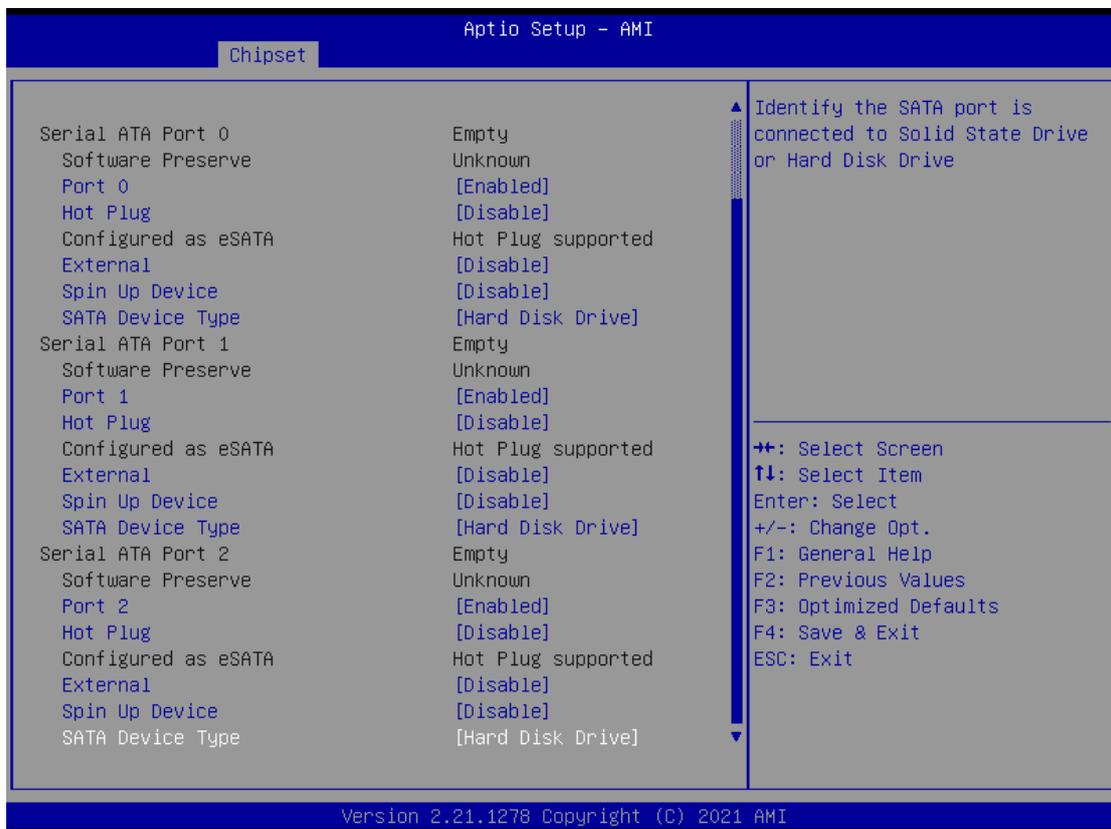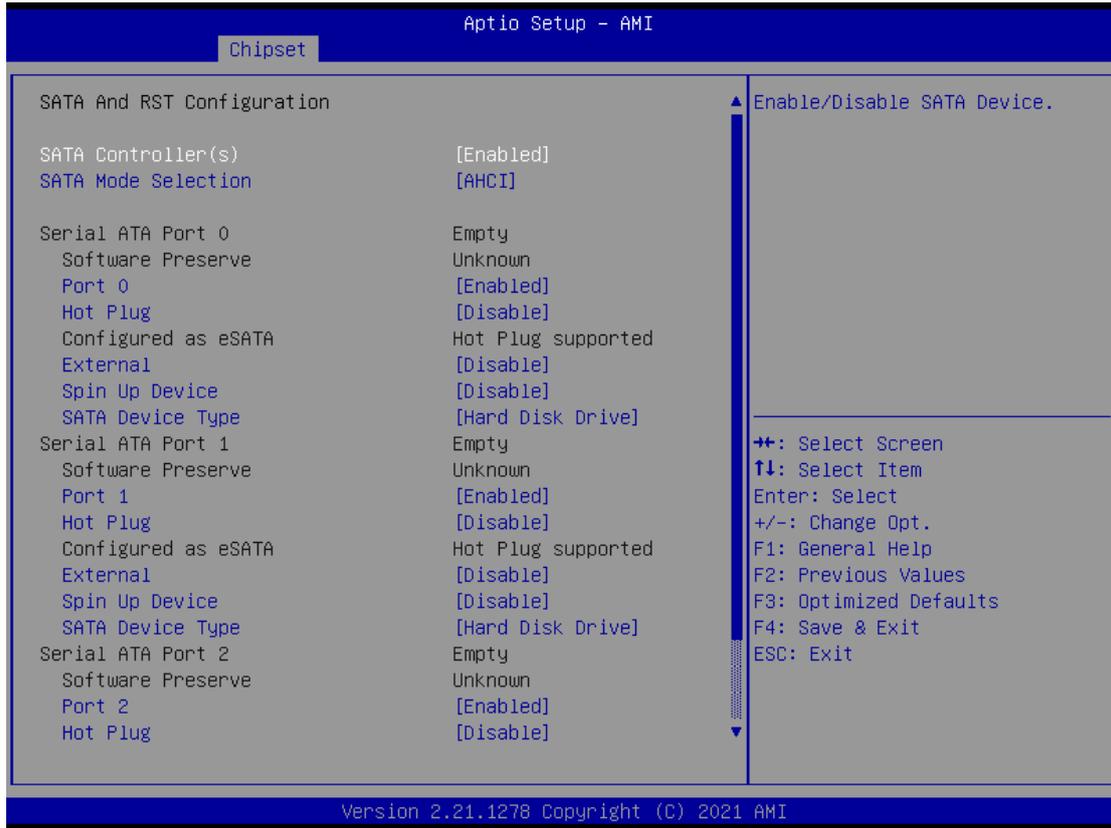

Feature	Options	Description
SATA Controller(s)	Enabled Disabled	Enable/Disable SATA Device.
SATA Mode Selection	AHCI Intel® RST	Determines how SATA controller(s) operate.
Aggressive LPM Support	Enabled Disabled	Enable PCH to aggressively enter link power state.
Port 0	Enabled Disabled	Enable or Disable SATA Port
Hot Plug	Enabled Disabled	Designates this port as Hot Pluggable.
External	Enabled Disabled	Marks this port as external.
Spin Up Device	Enabled Disabled	If enabled for any of ports Staggered Spin Up will be performed and only the drives which have this option enabled will spin up at boot. Otherwise all drives spin up at boot.
SATA Device Type	Hard Disk Drive Solid State Drive	Identify the SATA port is connected to Solid State Drive or Hard Disk Drive


Security Configuration

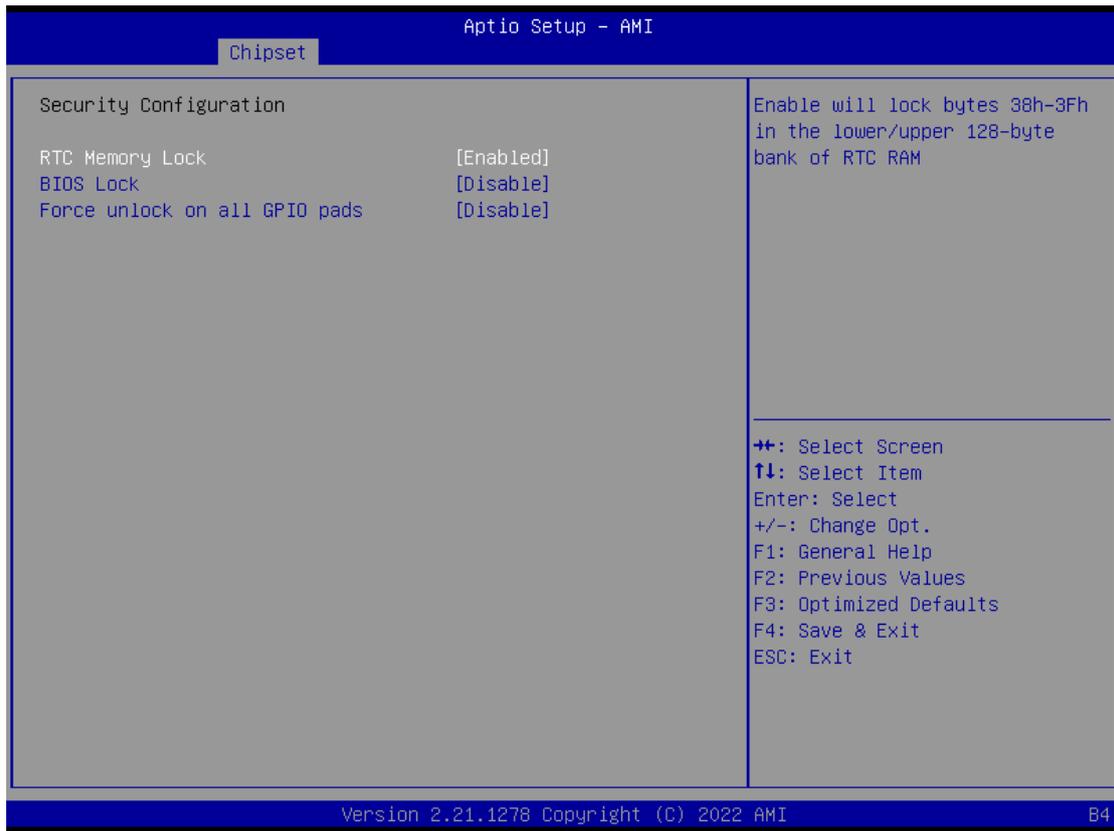

Feature	Options	Description
RTC Memory Lock	Disabled <b>Enabled</b>	Enable will lock bytes 38h-3Fh in the lower/upper 128-byte bank of RTC RAM
BIOS Lock	<b>Disabled</b> Enabled	Enable/Disable the PCH BIOS Lock Enable feature. Required to be enabled to ensure SMM protection of flash.
Force unlock on all GPIO pads	<b>Disabled</b> Enabled	If Enabled BIOS will force all GPIO pads to be in unlocked state


## Security

Select the Security menu item from the BIOS setup screen to enter the Security Setup screen. Users can select any of the items in the left frame of the screen.

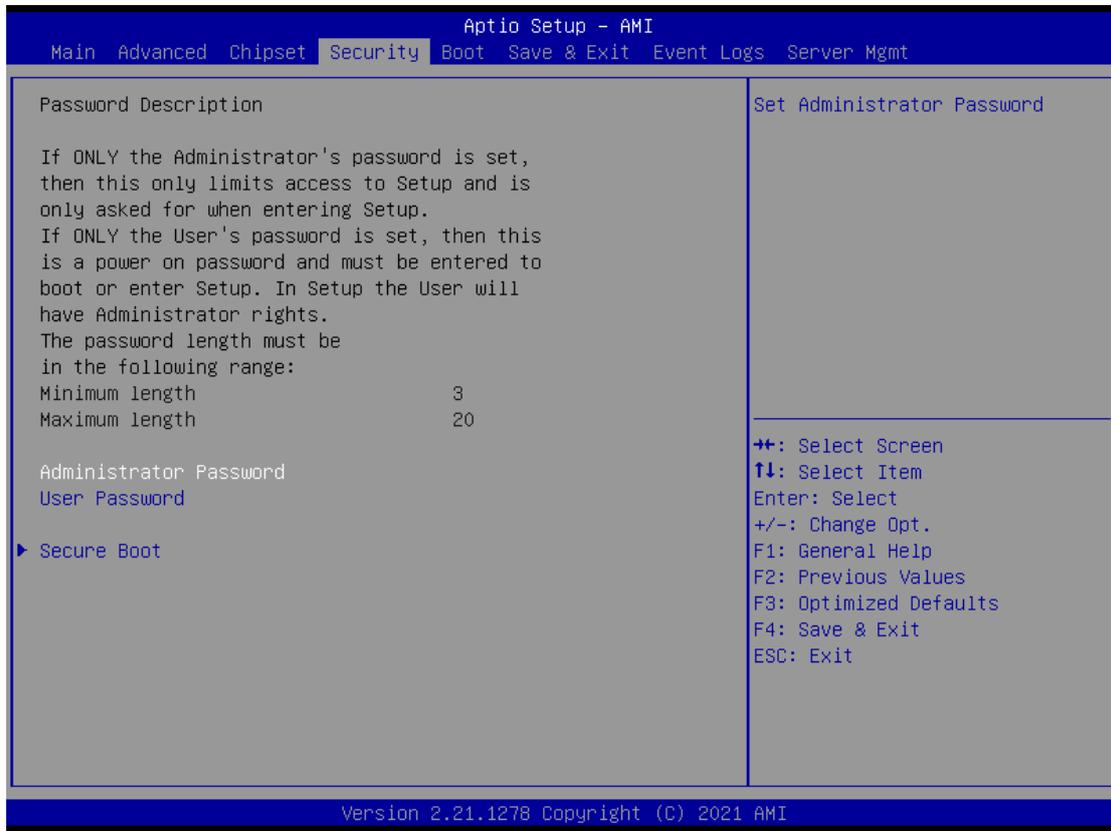


Feature	Description
Administrator Password	If ONLY the Administrator's password is set, it only limits access to Setup and is only asked for when entering Setup.
User Password	If ONLY the User's password is set, it serves as a power-on password and must be entered to boot or enter Setup. In Setup, the User will have Administrator rights.

## Secure Boot

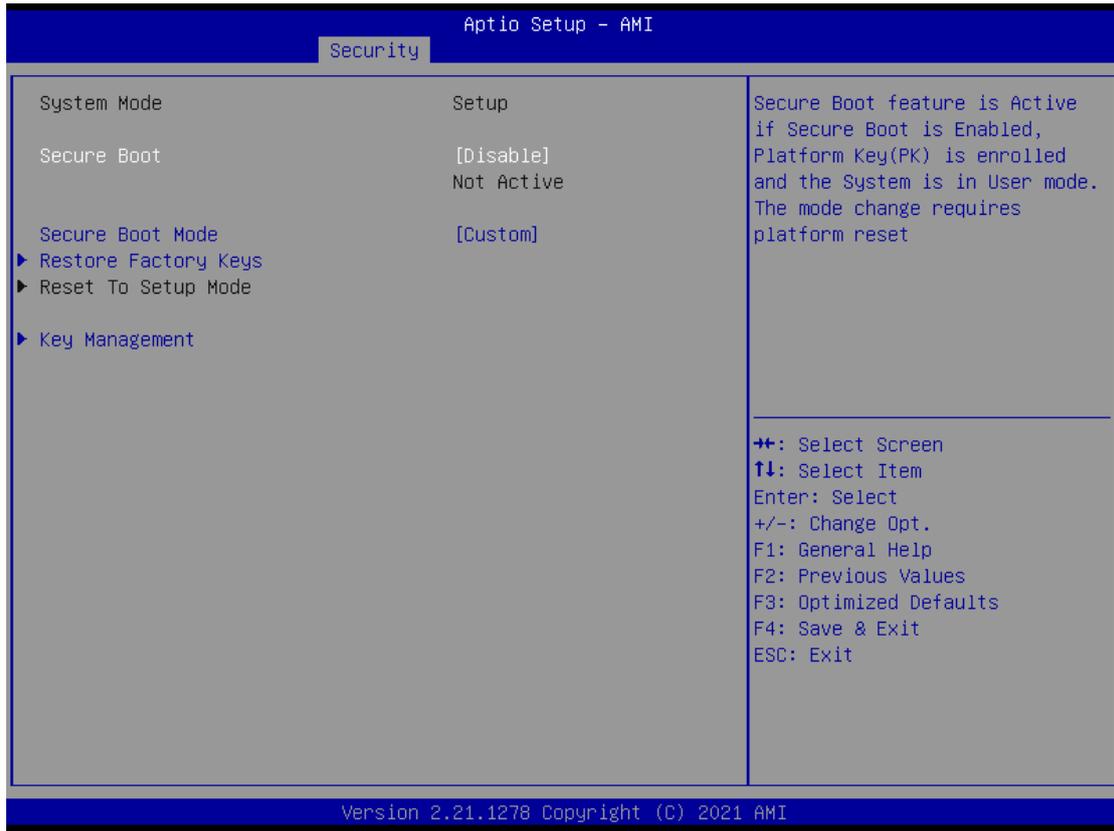

Feature	Options	Description
Secure Boot	Disabled Enabled	Secure Boot is activated when Platform Key (PK) is enrolled, System mode is User/Deployed, and CSM function is disabled.
Secure Boot Mode	Standard Custom	Customizable Secure Boot mode: In Custom mode, Secure Boot Policy variables can be configured by a physically present user without full authentication.


## Key Management

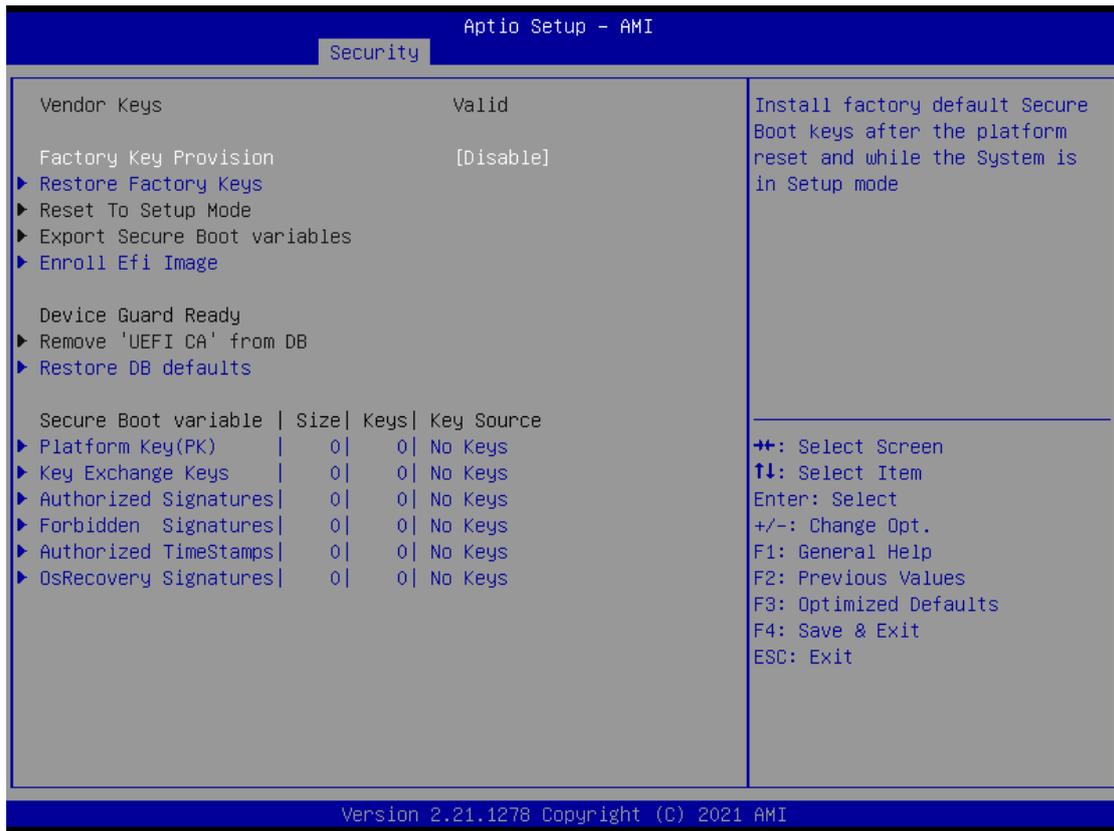

Feature	Options	Description
Factory Key Provision	Disabled Enabled	Provision factory default keys on next re-boot only when System in Setup Mode.
Restore Factory keys	None	Force System to User Mode. Configure NVRAM to contain OEM-defined factory default Secure Boot keys.
Enroll Efi Image	None	Allows the image to run in Secure Boot mode. Enroll SHA256 hash of the binary into Authorized Signature Database (db)
Restore DB defaults	None	Restore DB variable to factory defaults

## Boot Menu

Select the Boot menu item from the BIOS setup screen to enter the Boot Setup screen. Users can select any of the items in the left frame of the screen.

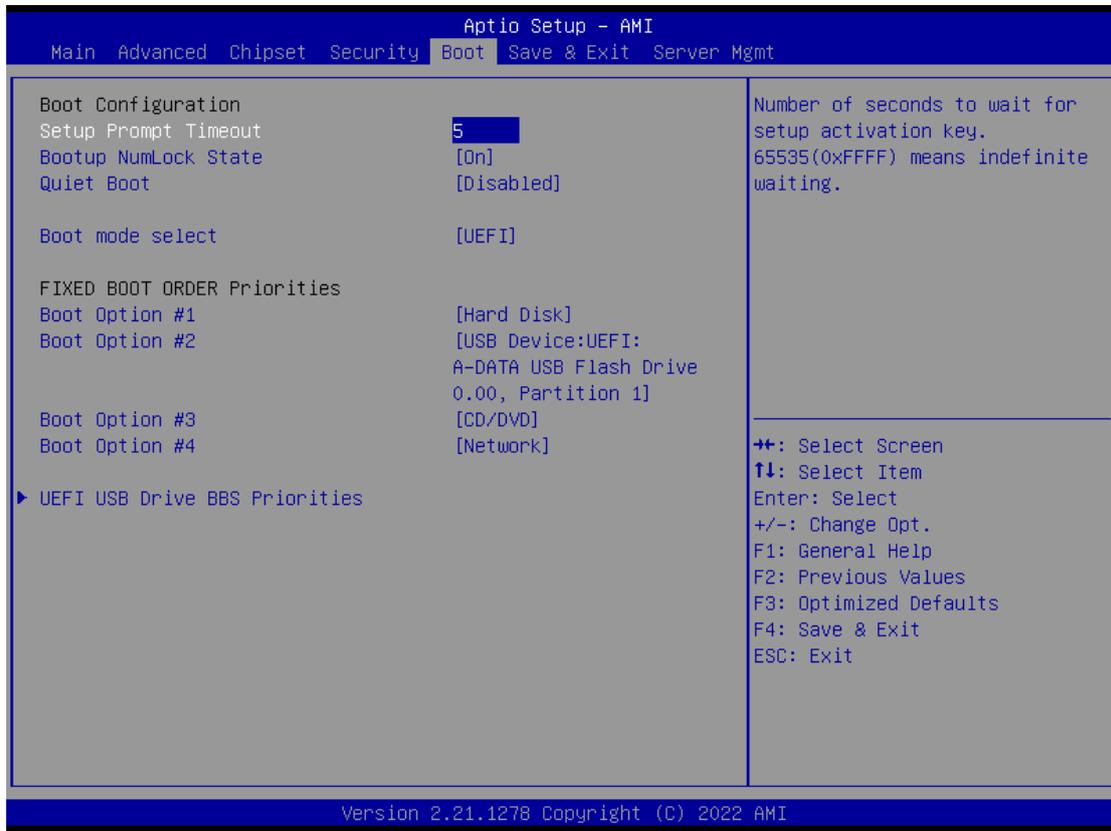

Feature	Options	Description
Setup Prompt Timeout	5	The number of seconds to wait for setup activation key. 65535 means indefinite waiting.
BootupNumLock State	On Off	Select the keyboard NumLock state
Quiet Boot	Disabled Enabled	Enables or disables Quiet Boot option.
Boot mode select	LEGACY UEFI	Select boot mode for LEGACY or UEFI.

- Choose boot priority from boot option group.
- Choose specific boot device priority sequence from available Group device.


## Save and Exit Menu

Select the Save and Exit menu item from the BIOS setup screen to enter the Save and Exit Setup screen. Users can select any of the items in the left frame of the screen.




### ■ Discard Changes and Exit

Select this option to quit Setup without saving any modifications to the system configuration. The following window will appear after the “**Discard Changes and Exit**” option is selected. Select “**Yes**” to discard changes and Exit Setup.

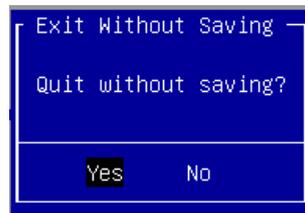


### ■ Save Changes and Reset

When Users have completed the system configuration changes, select this option to save the changes and reset from BIOS Setup in order for the new system configuration parameters to take effect. The following window will appear after selecting the “**Save Changes and Reset**” option is selected. Select “**Yes**” to Save Changes and reset.

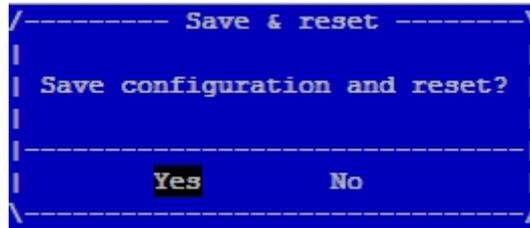

■ Restore Defaults

Restore default values for all setup options. Select "Yes" to load Optimized defaults.

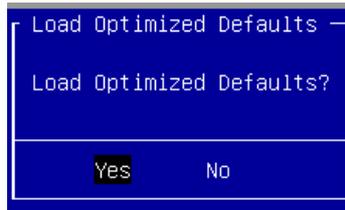

PS: The items under Boot Override may not have the same images. It would depend on devices connect on system.

# Remote Server Management

## Overview

This document specifies the BMC firmware features of Lanner. The BMC firmware implements IPMI 2.0 based on ASPEED service processor. It performs all the BMC management tasks defined by IPMI 2.0.

In addition, Lanner’s BMC firmware runs an embedded web-server for full configuration using Web UI, which has a low learning curve.

For detailed instructions on using each function, please refer to the full version of NCA-5220 BMC manuals available on.

## BMC Main Features

Feature		Description
<b>IPMI 2.0 Standard Features</b>	System Interface support	<ul style="list-style-type: none"> <li>• KCS (System Interface Support)</li> <li>• LAN (RMCP+)</li> <li>• BMC stack with an IPMI 2.0 implementation</li> <li>• Sensor monitoring</li> <li>• System power management</li> <li>• Watchdog timer</li> <li>• System Event Log (SEL)</li> <li>• Support in IPMI stack for SOL to remotely access BIOS and text console before OS booting</li> <li>• IPMI based user management</li> <li>• Multiple user permission level</li> </ul>
	IPMI 2.0 based Management	
	System Management	
	Event Log	
	Text Console Redirection: SOL	
User Management		
<b>Non-IPMI functions</b>	Web User Interfaces	<ul style="list-style-type: none"> <li>• BMC management via web user interface</li> <li>• Integrated KVM and Virtual Media</li> </ul>
	User authorization	<ul style="list-style-type: none"> <li>• RADIUS support</li> <li>• LDAP support</li> </ul>
	Security	<ul style="list-style-type: none"> <li>• SSL and HTTPS support</li> </ul>
	Maintenance	<ul style="list-style-type: none"> <li>• Auto-sync time with NTP server</li> <li>• Remote firmware update by Web UI or Linux tool</li> </ul>

## BMC Firmware Functional Description

### System health monitoring

The BMC implements system sensor monitoring feature. It could monitor voltage, temperature, and current of critical components.

### System Power Management

The BMC implements chassis power and resets functions for system administrators to control and manage the system power behavior. These functions can be activated by sending the IPMI 2.0 compatible chassis commands to the BMC over messaging interfaces. The following list summaries the supported functions.

- Chassis power on
- Chassis power off
- Chassis power cycle
- Chassis power reset
- Chassis power soft
- Server's power status report

### Watchdog Timer

The BMC provides an IPMI 2.0 compatible watchdog timer which can prevent the system from system hanging.

### System Event Log (SEL)

A non-volatile storage space is allocated to store system events for system status tracking.

### Serial over LAN (SOL)

IPMI 2.0 SOL is implemented to redirect the system serial controller traffic over an IPMI session. System administrators are able to establish a SOL connection with a standard IPMI client, like IPMITOOL, to remotely interact with serial text-based interfaces such as OS command-line and serial redirected BIOS interfaces.

### User Management

The BMC supports 9 IDs for IPMI user accounts. The maximum length of the username and password are 16 and 20 respectively, and the possible privilege levels are Callback, User, Operator, and Administrator. Moreover, the account creator is allowed to enable/disable the user account at any time. If not specified, the default user accounts are listed follows:

User Name	Password	User Access	Characteristics
<i>admin</i>	<i>admin</i>	Enabled	Password can be changed

### Keyboard, Video, Mouse (KVM) Redirection

- The BMC provides keyboard, video, and mouse (KVM) redirection over LAN. This application is available remotely

from the embedded web server.

- Support video recording, recorded videos to be downloaded & playable.

### Virtual Media Redirection

- The BMC provides remote virtual CD, HD and FD redirection. CD image could be mounted directly in KVM window. HD, FD could be mounted by NFS and SAMBA.
- Efficient USB 2.0 based CD/DVD redirection with a typical speed of 20XCD.
- Completely secured transmission.

### IPMI Commands Support List

COMMANDS	NETFN	CMD
<b>IPM Device "Global" Commands</b>		
Get Device ID	APP (06h)	00h
Cold Reset	APP (06h)	02h
Warm Reset	APP (06h)	03h
Get Device GUID	APP (06h)	08h
<b>BMC Watchdog Timer Commands</b>		
Reset Watchdog Timer	APP (06h)	22h
Set Watchdog Timer	APP (06h)	24h
Get Watchdog Timer	APP (06h)	25h
<b>BMC Device and Messaging Commands</b>		
Get System GUID	APP (06h)	37h
Get Channel Info	APP (06h)	42h
Set User Access	APP (06h)	43h
Get User Access	APP (06h)	44h
Set User Name	APP (06h)	45h
Get User Name	APP (06h)	46h
Set User Password	APP (06h)	47h
<b>Chassis Device Commands</b>		
Get Chassis Capabilities	Chassis (00h)	00h
Get Chassis Status	Chassis (00h)	01h
Chassis Control	Chassis (00h)	02h
Chassis Reset	Chassis (00h)	03h
<b>Sensor Device Commands</b>		
Get Sensor Reading Factors	S/E (04h)	23h
Get Sensor Hysteresis	S/E (04h)	25h
Get Sensor Threshold	S/E (04h)	27h
Get Sensor Event Enable	S/E (04h)	29h
Get Sensor Event Status	S/E (04h)	2Bh
Get Sensor Reading	S/E (04h)	2Dh
Get Sensor Type	S/E (04h)	2Fh
<b>SDR Device Commands</b>		
Get SDR Repository Info	Storage (0Ah)	20h
Get SDR Repository Allocation Info	Storage (0Ah)	21h

Get SDR	Storage (0Ah)	23h
Get SDR Repository Time	Storage (0Ah)	28h
<b>SEL Device Commands</b>		
Get SEL Info	Storage (0Ah)	40h
Get SEL Allocation Info	Storage (0Ah)	41h
Get SEL Entry	Storage (0Ah)	43h
Delete SEL Entry	Storage (0Ah)	46h
Clear SEL	Storage (0Ah)	47h
Get SEL Time	Storage (0Ah)	48h
Set SEL Time	Storage (0Ah)	49h
Get SEL Time UTC Offset	Storage (0Ah)	5Ch
Set SEL Time UTC Offset	Storage (0Ah)	5Dh
<b>LAN Device Commands</b>		
Set LAN Configuration Parameters	Transport (0Ch)	01h
Get LAN Configuration Parameters	Transport (0Ch)	02h
<b>Serial/Modem Device Commands</b>		
Set User Callback Options	Transport (0Ch)	1Ah
Get User Callback Options	Transport (0Ch)	1Bh
SOL Activating	Transport (0Ch)	20h
Set SOL Configuration Parameters	Transport (0Ch)	21h
Get SOL Configuration Parameters	Transport (0Ch)	22h

# APPENDIX A: LED INDICATOR EXPLANATIONS

► System Power / Status / HDD Activity



LED	COLOR	LED ACTION	DESCRIPTION
POWER	Green	Steady	System is powered ON
	OFF	N/A	System is powered OFF
STATUS	Green	Steady	control by GPIO
	Red	Steady	control by GPIO
	OFF	N/A	System is powered OFF
HDD	Amber	<b>Blinking</b>	Storage (HDD/SATA/NVME) Active
	OFF	N/A	No Data Access or Power OFF

## APPENDIX B: TERMS AND CONDITIONS

### Warranty Policy

1. All products are under warranty against defects in materials and workmanship for a period of one year from the date of purchase.
2. The buyer will bear the return freight charges for goods returned for repair within the warranty period, whereas the manufacturer will bear the after service freight charges for goods returned to the user.
3. The buyer will pay for the repair (for replaced components plus service time) and transportation charges (both ways) for items after the expiration of the warranty period.
4. If the RMA Service Request Form does not meet the stated requirement as listed on the "RMA Service," RMA goods will be returned at customer's expense.
5. The following conditions are excluded from this warranty:
  - ▶ Improper or inadequate maintenance by the customer
  - ▶ Unauthorized modification, misuse, or reversed engineering of the product
  - ▶ Operation outside of the environmental specifications for the product.

### RMA Service

#### Requesting an RMA#

1. To obtain an RMA number, simply fill out and fax the "RMA Request Form" to your supplier.
2. The customer is required to fill out the problem code as listed. If your problem is not among the codes listed, please write the symptom description in the remarks box.
3. Ship the defective unit(s) on freight prepaid terms. Use the original packing materials when possible.
4. Mark the RMA# clearly on the box.



**Note:** The customer is responsible for shipping damage(s) resulting from inadequate/loose packing of the defective unit(s). All RMA# are valid for 30 days only; RMA goods received after the effective RMA# period will be rejected.

## RMA Service Request Form

When requesting RMA service, please fill out the following form. Without this form enclosed, your RMA cannot be processed.

<b>RMA No:</b>	Reasons to Return: <input type="checkbox"/> Repair(Please include failure details) <input type="checkbox"/> Testing Purpose
Company:	Contact Person:
Phone No.	Purchased Date:
Fax No.:	Applied Date:
Return Shipping Address: _____	
Shipping by: <input type="checkbox"/> Air Freight <input type="checkbox"/> Sea <input type="checkbox"/> Express _____	
<input type="checkbox"/> Others: _____	

Item	Model Name	Serial Number	Configuration

Item	Problem Code	Failure Status

- \*Problem Code:
- |                        |                              |                    |                          |
|------------------------|------------------------------|--------------------|--------------------------|
| 01: D.O.A.             | 07: BIOS Problem             | 13: SCSI           | 19: DIO                  |
| 02: Second Time R.M.A. | 08: Keyboard Controller Fail | 14: LPT Port       | 20: Buzzer               |
| 03: CMOS Data Lost     | 09: Cache RMA Problem        | 15: PS2            | 21: Shut Down            |
| 04: FDC Fail           | 10: Memory Socket Bad        | 16: LAN            | 22: Panel Fail           |
| 05: HDC Fail           | 11: Hang Up Software         | 17: COM Port       | 23: CRT Fail             |
| 06: Bad Slot           | 12: Out Look Damage          | 18: Watchdog Timer | 24: Others (Pls specify) |

**Request Party**

**Confirmed By Supplier**

\_\_\_\_\_  
Authorized Signature / Date

\_\_\_\_\_  
Authorized Signature / Date